

# WAGO-I/O-SYSTEM 750 XTR

## Manual



**750-1515/040-000**  
**8DO 24V DC 0.5A/ 2-wire /XTR**  
**8-Channel Digital Output Module 24 VDC;**  
**High-side Switching, 2-Wire Connection /XTR**

Version 1.2.0

© 2016 by WAGO Kontakttechnik GmbH & Co. KG  
All rights reserved.

### **WAGO Kontakttechnik GmbH & Co. KG**

Hansastraße 27  
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0  
Fax: +49 (0) 571/8 87 – 1 69

E-Mail: [info@wago.com](mailto:info@wago.com)

Web: <http://www.wago.com>

### **Technical Support**

Phone: +49 (0) 571/8 87 – 5 55  
Fax: +49 (0) 571/8 87 – 85 55

E-Mail: [support@wago.com](mailto:support@wago.com)

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: [documentation@wago.com](mailto:documentation@wago.com)

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

## Table of Contents

<b>1</b>	<b>Notes about this Documentation.....</b>	<b>5</b>
1.1	Validity of this Documentation.....	5
1.2	Copyright.....	5
1.3	Symbols.....	6
1.4	Number Notation.....	8
1.5	Font Conventions.....	8
<b>2</b>	<b>Important Notes .....</b>	<b>9</b>
2.1	Legal Bases .....	9
2.1.1	Subject to Changes .....	9
2.1.2	Personnel Qualifications.....	9
2.1.3	Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions.....	9
2.1.4	Technical Condition of Specified Devices.....	10
2.2	Safety Advice (Precautions).....	11
<b>3</b>	<b>Device Description .....</b>	<b>13</b>
3.1	View .....	15
3.2	Connectors.....	16
3.2.1	Data Contacts/Internal Bus.....	16
3.2.2	Power Jumper Contacts/Field Supply .....	17
3.2.3	Push-in CAGE CLAMP® Connectors.....	18
3.3	Display Elements .....	19
3.4	Operating Elements.....	19
3.5	Schematic Diagram .....	20
3.6	Technical Data .....	21
3.6.1	Device.....	21
3.6.2	Supply.....	21
3.6.3	Communication .....	21
3.6.4	Outputs .....	22
3.6.5	Connection Type .....	22
3.6.6	Mechanical Conditions.....	22
3.6.7	Climatic Environmental Conditions.....	22
3.7	Approvals .....	23
3.8	Standards and Guidelines.....	25
<b>4</b>	<b>Process Image .....</b>	<b>29</b>
<b>5</b>	<b>Mounting.....</b>	<b>30</b>
5.1	Mounting Sequence.....	30
5.2	Inserting and Removing Devices .....	31
5.2.1	Inserting the I/O Module .....	31
5.2.2	Removing the I/O Module.....	32
<b>6</b>	<b>Connect Devices .....</b>	<b>33</b>
6.1	Connecting a Conductor to the Push-in CAGE CLAMP®.....	33
<b>7</b>	<b>Using Interference-Free I/O Modules in Safety Related Applications .</b>	<b>34</b>
7.1	Important Notes.....	34

---

7.2	Connection for the I/O Module to Safety Switching Devices or Safety Modules.....	36
7.2.1	General Structure of a Potential Group .....	36
7.2.2	Examples of Connection.....	37
<b>8</b>	<b>Use in Hazardous Environments .....</b>	<b>38</b>
8.1	Marking Configuration Examples.....	39
8.1.1	Marking for Europe According to ATEX and IEC-Ex .....	39
8.1.2	Marking for America According to NEC 500 .....	44
8.2	Installation Regulations.....	45
8.2.1	Special Conditions for Safe Use (TÜV 14 ATEX 148929 X).....	46
8.2.2	Special Conditions for Safe Use (ATEX Certificate TÜV 12 ATEX 106032 X) .....	47
8.2.3	Special Conditions for Safe Use (IEC-Ex Certificate TUN 14.0035X) .....	48
8.2.4	Special Conditions for Safe Use (IEC-Ex Certificate IECEX TUN 12.0039 X) .....	49
8.2.5	Special Conditions for Safe Use according to ANSI/ISA 12.12.01 ...	50
	<b>List of Figures .....</b>	<b>51</b>
	<b>List of Tables.....</b>	<b>52</b>

# 1 Notes about this Documentation

## Note



### **Always retain this documentation!**

This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user. In addition, ensure that any supplement to this documentation is included, if necessary.

## 1.1 Validity of this Documentation

This documentation is only applicable to the I/O module 750-1515/040-000 (8DO 24V DC 0.5A/ 2-wire /XTR).

The I/O module 750-1515/040-000 shall only be installed and operated according to the instructions in this manual and in the manual for the used fieldbus coupler/controller.

## NOTICE

### **Consider power layout of the WAGO-I/O-SYSTEM 750!**

In addition to these operating instructions, you will also need the manual for the used fieldbus coupler/controller, which can be downloaded at [www.wago.com](http://www.wago.com). There, you can obtain important information including information on electrical isolation, system power and supply specifications.

## 1.2 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.

## 1.3 Symbols

---

 **DANGER****Personal Injury!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

---

 **DANGER****Personal Injury Caused by Electric Current!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

---

 **WARNING****Personal Injury!**

Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.

---

 **CAUTION****Personal Injury!**

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

---

**NOTICE****Damage to Property!**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

---

**NOTICE****Damage to Property Caused by Electrostatic Discharge (ESD)!**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

---

**Note****Important Note!**

Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.

---

---

## Information



### **Additional Information:**

Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

---

## 1.4 Number Notation

Table 1: Number Notation

Number Code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated with dots (.)

## 1.5 Font Conventions

Table 2: Font Conventions

Font Type	Indicates
<i>italic</i>	Names of paths and data files are marked in italic-type. e.g.: <i>C:\Program Files\WAGO Software</i>
<b>Menu</b>	Menu items are marked in bold letters. e.g.: <b>Save</b>
>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: <b>File &gt; New</b>
<b>Input</b>	Designation of input or optional fields are marked in bold letters, e.g.: <b>Start of measurement range</b>
“Value”	Input or selective values are marked in inverted commas. e.g.: Enter the value “4 mA” under <b>Start of measurement range</b> .
<b>[Button]</b>	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: <b>[Input]</b>
<b>[Key]</b>	Keys are marked with bold letters in square brackets. e.g.: <b>[F5]</b>



## 2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

### 2.1 Legal Bases

#### 2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications that serve to increase the efficiency of technical progress. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

#### 2.1.2 Personnel Qualifications

All sequences implemented on WAGO-I/O-SYSTEM 750 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the coupler or controller should always be carried out by qualified personnel with sufficient skills in PLC programming.

#### 2.1.3 Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions

Fieldbus couplers, fieldbus controllers and I/O modules found in the modular WAGO-I/O-SYSTEM 750 receive digital and analog signals from sensors and transmit them to actuators or higher-level control systems. Using programmable controllers, the signals can also be (pre-) processed.

The devices have been developed for use in an environment that meets the IP20 protection class criteria. Protection against finger injury and solid impurities up to 12.5 mm diameter is assured; protection against water damage is not ensured. Unless otherwise specified, operation of the devices in wet and dusty environments is prohibited.

Operating the WAGO-I/O-SYSTEM 750 devices in home applications without further measures is only permitted if they meet the emission limits (emissions of interference) according to EN 61000-6-3. You will find the relevant information in the section “Device Description” > “Standards and Guidelines” in the manual for the used fieldbus coupler/controller.

Appropriate housing (per 2014/34/EU) is required when operating the WAGO-I/O-SYSTEM 750 in hazardous environments. Please note that a prototype test certificate must be obtained that confirms the correct installation of the system in a housing or switch cabinet.

#### **2.1.4 Technical Condition of Specified Devices**

The devices to be supplied ex works are equipped with hardware and software configurations, which meet the individual application requirements. WAGO Kontakttechnik GmbH & Co. KG will be exempted from any liability in case of changes in hardware or software as well as to non-compliant usage of devices.

Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

## 2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



### **DANGER**

#### **Do not work on devices while energized!**

All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.

### **DANGER**

#### **Install the device only in appropriate housings, cabinets or in electrical operation rooms!**

The WAGO-I/O-SYSTEM 750 and its components are an open system. As such, install the system and its components exclusively in appropriate housings, cabinets or in electrical operation rooms. Allow access to such equipment and fixtures to authorized, qualified staff only by means of specific keys or tools.



### **CAUTION**

#### **Hot surface!**

The surface of the housing can become hot during operation. If the device was operated at high ambient temperatures, allow it to cool off before touching it.

### **NOTICE**

#### **Replace defective or damaged devices!**

Replace defective or damaged device/module (e.g., in the event of deformed contacts), since the long-term functionality of device/module involved can no longer be ensured.

### **NOTICE**

#### **Protect the components against materials having seeping and insulating properties!**

The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

**NOTICE****Clean only with permitted materials!**

Clean soiled contacts using oil-free compressed air or with ethyl alcohol and leather cloths.

**NOTICE****Do not use any contact spray!**

Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

**NOTICE****Do not reverse the polarity of connection lines!**

Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.

**NOTICE****Avoid electrostatic discharge!**

The devices are equipped with electronic components that may be destroyed by electrostatic discharge when touched. Please observe the safety precautions against electrostatic discharge per DIN EN 61340-5-1/-3. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly grounded.

**NOTICE****Perform insulation tests with direct current (DC)!**

Both the supply voltage and control voltage side are capacitively coupled to the DIN rail. If the modules are mounted on the DIN rail, application of an AC voltage between the two potentials can lead to the destruction of the device.

Use only direct current (DC) for insulation testing.

To avoid destroying the device, discharge the device completely before applying the test voltage again.

### 3 Device Description

The 750-1515/040-000 (8DO 24V DC 0.5A/ 2-wire /XTR) Digital Output Module transmits binary control signals from the automation device to the connected actuators (e.g., solenoid valves, contactors, transmitters, relays or other electrical loads).

These output modules can recognize a short circuit to ground, a line break and an overload in either channel.

The I/O module has 8 output channels, providing a direct connection to 2-wire actuators.

The actuators are connected to the Push-in CAGE CLAMP® connectors DO 1 and 0 V ... DO 8 and 0 V.

The assignment of the connections is described in the “Connectors” section. Connection examples are shown in section “Connecting Devices” > ... > “Connection Example(s)”.

---

#### NOTICE

##### **Limit all induced voltage!**

The electronic components of the I/O module can be damaged by the induced voltage produced when inductive loads are de-activated.

An appropriate protection circuit, e.g., a recovery diode, must be installed in parallel to the load to limit this induced voltage.

---

The I/O module outputs provide high-side switching. If the signal status of an output channel is at “high” the 24 V potential for field power will be switched to the appropriate output connection.

A green LED indicates the switched status of each channel.

The meaning of the LEDs is described in the “Display Elements” section.

The I/O module 750-1515/040-000 (8DO 24V DC 0.5A/ 2-wire /XTR) receives the 24 V voltage supply for the field level from an upstream I/O module or from the fieldbus coupler/controller via blade-formed power jumper contacts. It then provides these potentials to subsequent I/O modules via spring-formed power jumper contacts.

---

#### NOTICE

##### **Do not exceed maximum current via power jumper contacts!**

The maximum current to flow through the power jumper contacts is 10 A.

Greater currents can damage the contacts.

When configuring your system, ensure that this current is not exceeded. If exceeded, insert an additional supply module.

---

The field voltage and the system voltage are electrically isolated from each other.

With consideration of the power jumper contacts, the individual modules can be arranged in any combination when configuring the fieldbus node. An arrangement in groups within the group of potentials is not necessary.

---

### Note



#### **Mixed operation**

Mixed operation (standard/XTR modules) within a node is possible when groups of modules are electrically isolated on the field side (i.e., electrically isolated power supply).

---

---

### Note



#### **Increased interference!**

For standard-compliant application in substation instrumentation and control, telecontrol systems, railway technology or shipbuilding certified operation, field-side power supply filter 750-624/040-001 or power supply filter 750-626/040-000 are generally to be used for XTR module groups.

---

The I/O module can be operated with all fieldbus couplers/controllers of the WAGO-I/O-SYSTEM 750 XTR.

Observe the instructions for mixed operation when used in mixed operation behind standard fieldbus couplers/controllers.

### 3.1 View

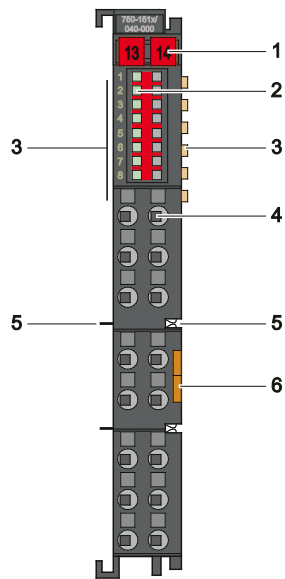


Figure 1: View

Table 3: Legend for Figure “View”

Pos.	Description	Details See Section
1	Marking possibility with Mini-WSB	---
2	Status LEDs	“Device Description” > “Display Elements”
3	Data contacts	“Device Description” > “Connectors”
4	Push-in CAGE CLAMP <sup>®</sup> connectors	“Device Description” > “Connectors”
5	Power jumper contacts	“Device Description” > “Connectors”
6	Release tab	“Mounting” > “Inserting and Removing Devices”

## 3.2 Connectors

### 3.2.1 Data Contacts/Internal Bus

Communication between the fieldbus coupler/controller and the I/O modules as well as the system supply of the I/O modules is carried out via the internal bus. It is comprised of 6 data contacts, which are available as self-cleaning gold spring contacts.

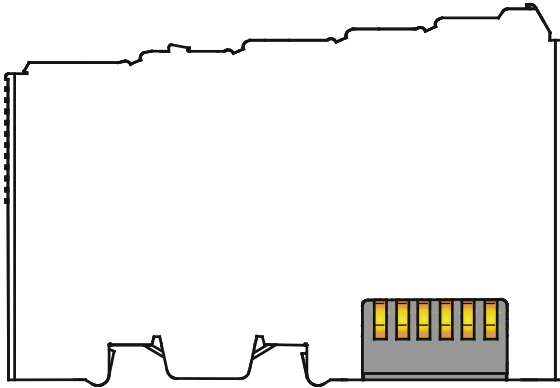


Figure 2: Data Contacts

### NOTICE

**Do not place the I/O modules on the gold spring contacts!**

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!

### NOTICE



**Ensure that the environment is well grounded!**

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. data contacts.



### 3.2.2 Power Jumper Contacts/Field Supply

## ⚠ CAUTION

### Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

The I/O module 750-1515/040-000 has 2 self-cleaning power jumper contacts that supply and transmit power for the field side. The contacts on the left side of the I/O module are designed as blade contacts and those on the right side as spring contacts.

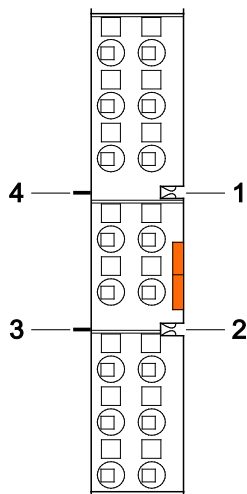


Figure 3: Power Jumper Contacts

Table 4: Legend for Figure “Power Jumper Contacts”

Contact	Type	Function
1	Spring contact	Potential transmission ( $U_V$ ) for field supply
2	Spring contact	Potential transmission (0 V) for field supply
3	Blade contact	Potential feed-in (0 V) for field supply
4	Blade contact	Potential feed-in ( $U_V$ ) for field supply

## NOTICE

### Do not exceed maximum current via power jumper contacts!

The maximum current to flow through the power jumper contacts is 10 A. Greater currents can damage the contacts.

When configuring your system, ensure that this current is not exceeded. If exceeded, insert an additional supply module.

### 3.2.3 Push-in CAGE CLAMP® Connectors

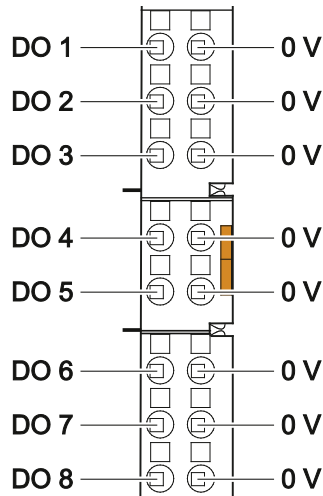


Figure 4: Push-in CAGE CLAMP® Connectors

Table 5: Legend for Figure “Push-in CAGE CLAMP® Connectors”

Channel	Designation	Connector	Function
1	DO 1	1	Output DO 1: Signal voltage
	0 V	9	Output DO 1: Field supply 0 V
2	DO 1	2	Output DO 2: Signal voltage
	0 V	10	Output DO 2: Field supply 0 V
		⋮	
		⋮	
		⋮	
7	DO 1	7	Output DO 7: Signal voltage
	0 V	15	Output DO 7: Field supply 0 V
8	DO 8	8	Output DO 8: Signal voltage
	0 V	16	Output DO 8: Field supply 0 V

### 3.3 Display Elements

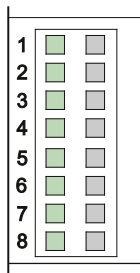


Figure 5: Display Elements

Table 6: Legend for Figure “Display Elements”

Channel	Designation	LED	State	Function
1	State DO 1	1	Off	Output DO 1: Signal voltage (0)
			Green	Output DO 1: Signal voltage (1)
				⋮
8	State DO 8	8	Off	Output DO 8: Signal voltage (0)
			Green	Output DO 8: Signal voltage (1)

### 3.4 Operating Elements

The I/O module 750-1515/040-000 has no operating elements.

### 3.5 Schematic Diagram

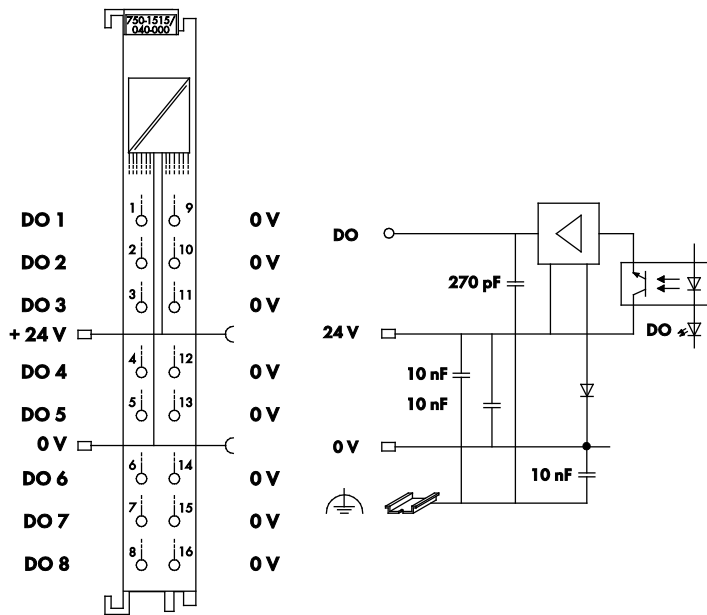


Figure 6: Schematic Diagram

## 3.6 Technical Data

### 3.6.1 Device

Table 7: Technical Data – Device

Width	12 mm
Height (from upper edge of DIN 35 rail)	62 mm
Length	100 mm
Weight	48 g
Degree of protection	IP20

### 3.6.2 Supply

Table 8: Technical Data – Supply

Current consumption, system voltage max. (5 VDC)	20 mA
Current consumption, power jumper contact typ. (24 VDC)	15 mA
Voltage via power jumper contacts:	24 VDC
under laboratory conditions +15 °C ... +35 °C	18 V ... 31.2 V (17.4 V ... 31.2 V) <sup>1)</sup>
for ambient operating temperature -40 °C ... +55 °C	18 V ... 28.8 V (17.4 V ... 28.8 V) <sup>1)</sup>
for ambient operating temperature +55 °C ... +70 °C	18 V ... 26.4 V (17.4 V ... 26.4 V) <sup>1)</sup>
Current via power jumper contacts max.	10 A
Rated surge voltage	1 kV

<sup>1)</sup> Including residual ripple of 15 %

### 3.6.3 Communication

Table 9: Technical Data – Communication

Bit width	8 bits
-----------	--------

### 3.6.4 Outputs

Table 10: Technical Data – Outputs

No. of outputs	8
Output type	High-side switching
Type of load	Lamps, resistive and inductive load
Switching frequency $_{max.}$	1 kHz
Output current $_{max.}$ , 1 Output	0.5 A, short-circuit protected
$L_{max.}$ ( $V_{cc} = 24\text{ V}$ , $R_{Load} = 48\text{ Ohm}$ )	2 H
Voltage quenching circuit $_{max.}$	$ V_{cc} - 47\text{ V} $

### 3.6.5 Connection Type

Table 11: Technical Data – Field Wiring

Wire connection	Push-in CAGE CLAMP®
Cross section	0.25 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> / AWG 24 ... 16
Stripped lengths	8 mm ... 9 mm / 0.33 in

Table 12: Technical Data – Power Jumper Contacts

Power jumper contacts	blade/spring contact, self-cleaning, hard gold plated
Voltage drop at $I_{max.}$	< 1 V at 64 I/O modules

Table 13: Technical Data – Data Contacts

Data contacts	slide contact, self-cleaning, hard gold plated
---------------	--

### 3.6.6 Mechanical Conditions

Table 14: Technical Data – Mechanical Conditions

Vibration resistance	Max. 5g <sup>1)</sup>
----------------------	-----------------------

<sup>1)</sup> Follow the installation instructions

### 3.6.7 Climatic Environmental Conditions

Table 15: Technical Data – Climatic Environmental Conditions

Operating temperature range	-40 °C ... +70 °C
Storage temperature range	-40 °C ... +85 °C
Relative humidity <sup>1)</sup>	95 %
Elevation above sea level	0 m ... 2000 m
without temperature derating	2000 m ... 5000 m: 0.5 K per 100 m
with temperature derating	5000 m
max.	

<sup>1)</sup> Short-term condensation per Class 3K7/IEC EN 60721-3-3 and E DIN 40046-721-3 (except wind-driven precipitation, water and ice formation)

## 3.7 Approvals

### Information



#### More information about approvals.

Detailed references to the approvals are listed in the document “Overview Approvals **WAGO-I/O-SYSTEM 750**”, which you can find via the internet under: [www.wago.com](http://www.wago.com) > SERVICES > DOWNLOADS > Additional documentation and information on automation products > WAGO-I/O-SYSTEM 750 > System Description.

The following approvals have been granted to 750-1515/040-000 I/O modules:



Conformity Marking



cUL<sub>us</sub>

UL508



Korea Certification

MSIP-REM-W43-DOM750

The following Ex approvals have been granted to 750-1515/040-000 I/O modules:



cUL<sub>us</sub>

ANSI/ISA 12.12.01

Class I, Div2 ABCD T4

The following Ex approvals are pending for 750-1515/040-000 I/O modules:



ATEX

IECEX

The following ship approvals have been granted to 750-1515/040-000 I/O modules:



GL (Germanischer Lloyd)

Cat. A, B, C, D (EMC 1), H

The following ship approvals are pending for 750-1515/040-000 I/O modules:



ABS (American Bureau of Shipping)



Federal Maritime and Hydrographic Agency



BV (Bureau Veritas)



DNV (Det Norske Veritas)

Class B



KR (Korean Register of Shipping)



LR (Lloyd's Register)

Env. 1, 2, 3, 4



NKK (Nippon Kaiji Kyokai)



PRS (Polski Rejestr Statków)



RINA (Registro Italiano Navale)



### 3.8 Standards and Guidelines

750-1515/040-000 I/O modules meet the following standards and guidelines:

Table 16: Climatic and Mechanical Environmental Conditions

Standard	Test Value
<b>Transport</b>	
EN 60870-2-2	Ct2(2k4) (except precipitation / water / moisture)
<b>Mechanical Environmental Conditions</b>	
EN 60870-2-2	Bm
EN 60721-3-1	1M3
EN 60721-3-3	3M5
EN 60068-2-6	Acceleration 5g
IEC 60068-2-27 Shock	15g, 11 ms, 1000 shocks per axis and direction, half-sine
	25g, 6 ms, 1000 shocks per axis and direction, half-sine
EN 50155 EN 61373	Random vibration: Category 1, classes A and B
	Shock 5g, 30 ms: Category 1, classes A and B
Shipbuilding <sup>*)</sup>	Ambient categories A ... D, H (5g, 25 Hz ... 150 Hz)
<b>Climatic Environmental Conditions</b>	
EN 60721-3-1	1K5 (except precipitation and ice formation)
EN 60721-3-3	3K7 (except wind-driven precipitation, water and ice formation)
EN 60870-2-2	C3 (except wind-driven precipitation and ice formation)
Shipbuilding <sup>*)</sup>	Ambient categories A ... D, H (-40 °C ... +70 °C)

<sup>\*)</sup> The list of ship certifications issued is available in the section "Approvals".

The I/O module 750-1515/040-000 meets the following EMC standards as these standards relate to the I/O module:

Table 17: EMC – Immunity to Interference

Standard	Test Value
<b>Electrostatic Discharge</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-2</li> <li>• EN 60255-22-2</li> <li>• IEEE C37.90.3</li> </ul>	8 kV (contact discharge) 8 kV (air discharge)
<b>High-frequency Electromagnetic Fields</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-3 + A1: + A2</li> <li>• EN 60255-22-3</li> <li>• IEEE C37.90.2</li> </ul>	20 V/m (80 MHz ... 1 GHz) 10 V/m (1 GHz ... 3 GHz)
<b>Fast Electrical Transient Disturbances / Burst</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-4</li> <li>• EN 60255-22-4</li> <li>• IEEE C37.90.1</li> </ul>	4 kV
<b>Surge Voltage / Surge</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-5</li> <li>• EN 60255-22-5</li> </ul>	1 kV (conductor/conductor) 2 kV (conductor/ground)
<b>Conducted Disturbances, Induced by High-frequency Fields</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-6</li> <li>• EN 60255-22-6</li> </ul>	10 V (150 kHz ... 80 MHz)
<b>Magnetic Fields With Electrical Frequencies</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-8</li> </ul>	300 A/m continuous / 1000 A/m for 1 s
<b>Pulse-shaped Magnetic Fields</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-9 + A1</li> </ul>	300 A/m
<b>Damped Oscillatory Magnetic Fields</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-10 + A1</li> </ul>	100 A/m
<b>Voltage Dips, Short-term Interruptions and Voltage Fluctuations</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-11</li> </ul>	Standard not applicable
<b>Damped Sinusoidal Oscillations</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-12</li> </ul>	1 kV (conductor/conductor) 2 kV (conductor/ground)
<b>Harmonics and Interharmonics</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-13 + A1</li> </ul>	Standard not applicable
<b>Conducted Asymmetric Disturbances</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-16 + A1 + A2</li> </ul>	30 V continuous 300 V for 1 s
<b>Line Frequency Disturbances</b>	
<ul style="list-style-type: none"> <li>• EN 60255-22-7</li> </ul>	Standard not applicable
<b>Alternating Components of the Voltage to DC Line Connections</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-17+A2</li> </ul>	15 %

Table 17: EMC – Immunity to Interference

Standard	Test Value
<b>Damped Oscillatory Waves</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-18 + A1</li> <li>• EN 60255-22-1</li> <li>• IEEE C37.90.1</li> </ul>	1.25 kV conductor/conductor 2.5 kV conductor/ground
<b>Voltage Dips, Short-term Interruptions and Voltage Fluctuations to DC Supply Inputs</b>	
<ul style="list-style-type: none"> <li>• EN 61000-4-29</li> <li>• EN 60255-11</li> </ul>	Standard not applicable
<b>Harmonics</b>	
<ul style="list-style-type: none"> <li>• Shipbuilding<sup>*)</sup></li> </ul>	max. 2 W DC: 3 V <sub>eff</sub> AC: 10 % to 15th harmonic 10 % ... 1 % for 15th to 100th harmonic 1 % for 100th to 200th harmonic

<sup>\*)</sup> The list of ship certifications issued is available in the section “Approvals”.

Table 18: EMC – Emission of Interference

Standard	Test Value <sup>*)</sup>
<b>Enclosure Emission of Interference</b>	
<ul style="list-style-type: none"> <li>• EN 61000-6-3 + A1</li> <li>• EN 55022 Class B</li> </ul>	30 dB(μV/m), QP, 30 MHz ... 230 MHz 37 dB(μV/m), QP, 230 MHz ... 1 GHz 70 dB(μV/m), Peak, 1 GHz ... 3 GHz 50 dB(μV/m), AV, 1 GHz ... 3 GHz 74 dB(μV/m), Peak, 3 GHz ... 6 GHz 54 dB(μV/m), AV, 3 GHz ... 6 GHz
<ul style="list-style-type: none"> <li>• EN 61000-6-4 + A1</li> <li>• EN 60255-26</li> <li>• EN 55011 + A1 Class A</li> <li>• EN 55022 Class A</li> </ul>	40 dB(μV/m), QP, 30 MHz ... 230 MHz 47 dB(μV/m), QP, 230 MHz ... 1 GHz 76 dB(μV/m), Peak, 1 GHz ... 3 GHz 56 dB(μV/m), AV, 1 GHz ... 3 GHz 80 dB(μV/m), Peak, 3 GHz ... 6 GHz 60 dB(μV/m), AV, 3 GHz ... 6 GHz
<ul style="list-style-type: none"> <li>• Shipbuilding<sup>**) (EMC 1)</sup></li> </ul>	80 dB(μV/m) ... 50 dB(μV/m), QP, 150 kHz ... 300 kHz 50 dB(μV/m) ... 34 dB(μV/m), QP, 0.3 MHz ... 30 MHz 54 dB(μV/m), QP, 30 MHz ... 2 GHz 24 dB(μV/m), QP, 156 MHz ... 165 MHz
<ul style="list-style-type: none"> <li>• Shipbuilding<sup>**) (EMC 2)</sup></li> </ul>	80 dB(μV/m) ... 50 dB(μV/m), QP, 150 kHz ... 30 MHz 60 dB(μV/m) ... 54 dB(μV/m), QP, 30 MHz ... 100 MHz 54 dB(μV/m), QP, 100 MHz ... 2 GHz 24 dB(μV/m), QP, 156 MHz ... 165 MHz

Table 18: EMC – Emission of Interference

Standard	Test Value <sup>*)</sup>
<b>Conducted Emission of Interference – Line Connection AC Voltage</b>	
<ul style="list-style-type: none"> <li>• EN 61000-6-3 + A1</li> <li>• EN 55022 Class B</li> </ul>	Standard not applicable
<ul style="list-style-type: none"> <li>• EN 61000-6-4 + A1</li> <li>• EN 55011 + A1 Class A</li> </ul>	Standard not applicable
<b>Conducted Emission of Interference – Line Connection</b>	
• Shipbuilding <sup>**) (EMC 1)</sup>	96 dB(μV) ... 50 dB(μV), 10 kHz ... 150 kHz 60 dB(μV) ... 50 dB(μV), 150 kHz ... 350 kHz 50 dB(μV), 0.35 MHz ... 30 MHz
• Shipbuilding <sup>**) (EMC 2)</sup>	120 dB(μV) ... 69 dB(μV), 10 kHz ... 150 kHz 79 dB(μV), 150 kHz ... 500 kHz 73 dB(μV), 0.5 MHz ... 30 MHz
<b>Conducted Emission of Interference – Line Connection DC Voltage</b>	
<ul style="list-style-type: none"> <li>• EN 61000-6-3 + A1</li> <li>• EN 60255-26</li> <li>• EN 55022 Class A</li> </ul>	79 dB(μV) QP, 0.15 MHz ... 0.5 MHz 66 dB(μV) AV, 0.15 MHz ... 0.5 MHz 73 dB(μV) QP, 0.5 MHz ... 30 MHz 60 dB(μV) AV, 0.5 MHz ... 30 MHz

<sup>\*)</sup> QP = Quasi Peak Detector; AV = Average Detector

<sup>\*\*)</sup> If necessary, please find different data in the section “Approval” (regarding approval for EMC 1 or EMC 2).

## 4 Process Image

Table 19: Output Bits

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DO 8	DO 7	DO 6	DO 5	DO 4	DO 3	DO 2	DO 1
DO 1	Signal state DO 1 – Digital output channel 1						
DO 2	Signal state DO 2 – Digital output channel 2						
DO 3	Signal state DO 3 – Digital output channel 3						
DO 4	Signal state DO 4 – Digital output channel 4						
DO 5	Signal state DO 5 – Digital output channel 5						
DO 6	Signal state DO 6 – Digital output channel 6						
DO 7	Signal state DO 7 – Digital output channel 7						
DO 8	Signal state DO 8 – Digital output channel 8						

## 5 Mounting

### 5.1 Mounting Sequence

Fieldbus couplers/controllers and I/O modules of the WAGO-I/O-SYSTEM 750/753 are snapped directly on a carrier rail in accordance with the European standard EN 50022 (DIN 35).

The reliable positioning and connection is made using a tongue and groove system. Due to the automatic locking, the individual devices are securely seated on the rail after installation.

Starting with the fieldbus coupler/controller, the I/O modules are mounted adjacent to each other according to the project design. Errors in the design of the node in terms of the potential groups (connection via the power contacts) are recognized, as the I/O modules with power contacts (blade contacts) cannot be linked to I/O modules with fewer power contacts.

#### CAUTION

##### **Risk of injury due to sharp-edged blade contacts!**

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

#### NOTICE

##### **Insert I/O modules only from the proper direction!**

All I/O modules feature grooves for power jumper contacts on the right side. For some I/O modules, the grooves are closed on the top. Therefore, I/O modules featuring a power jumper contact on the left side cannot be snapped from the top. This mechanical coding helps to avoid configuration errors, which may destroy the I/O modules. Therefore, insert I/O modules only from the right and from the top.

#### Note



##### **Don't forget the bus end module!**

Always plug a bus end module 750-600/040-000 onto the end of the fieldbus node! You must always use this bus end module at all fieldbus nodes with the WAGO I/O System 750 XTR fieldbus couplers/controllers to guarantee proper data transfer.

For vibration loads > 4g, observe the following installation instructions:

- Use pan-head screws or blind rivets at least every 60 mm (12 mm pin spacing) to secure the DIN rail.
- Make the open conductor length between strain relief and wire connection as short as possible.
- Use the reinforced end stop 249-197.

## 5.2 Inserting and Removing Devices



### CAUTION

#### Hot surface!

The surface of the housing can become hot during operation. If the device was operated at high ambient temperatures, allow it to cool off before touching it.

### NOTICE

#### Perform work on devices only if they are de-energized!

Working on energized devices can damage them. Therefore, turn off the power supply before working on the devices.

### NOTICE

#### Observe operating temperature!

XTR I/O modules may be operated below  $-20\text{ }^{\circ}\text{C}$ , but not wired and/or reconnected.

### 5.2.1 Inserting the I/O Module

1. Position the I/O module so that the tongue and groove joints to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are engaged.



Figure 7: Insert I/O Module (Example)

2. Press the I/O module into the assembly until the I/O module snaps into the carrier rail.

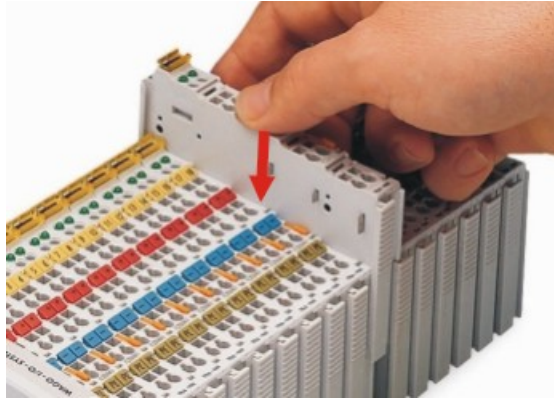


Figure 8: Snap the I/O Module into Place (Example)

With the I/O module snapped in place, the electrical connections for the data contacts and power jumper contacts (if any) to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are established.

## 5.2.2 Removing the I/O Module

1. Remove the I/O module from the assembly by pulling the release tab.

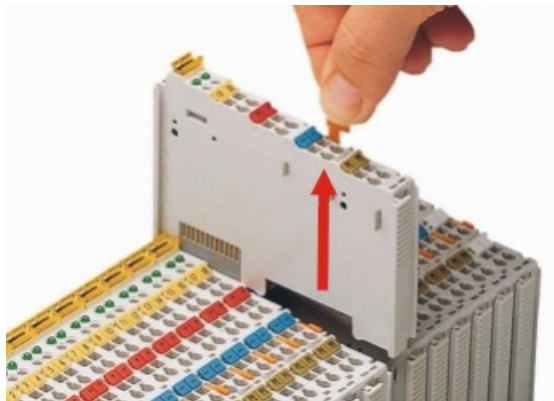


Figure 9: Removing the I/O Module (Example)

Electrical connections for data or power jumper contacts are disconnected when removing the I/O module.



## 6 Connect Devices

### 6.1 Connecting a Conductor to the Push-in CAGE CLAMP®

The Push-in CAGE CLAMP® connection is appropriate for solid, stranded and finely stranded conductors.



#### Note

**Only connect one conductor to each Push-in CAGE CLAMP® connection!**  
Only one conductor may be connected to each Push-in CAGE CLAMP® connection.  
Do not connect more than one conductor at one single connection!

If more than one conductor must be routed to one connection, these must be connected in an up-circuit wiring assembly, for example using WAGO feed-through terminals.

Terminate both solid and stranded or ferruled conductors by simply pushing them in - no tool required. For all other types of conductors, Push-in CAGE CLAMP® must be opened for connection with an operating tool with a 2.5 mm blade (order no. 210-719).

1. To open the Push-in CAGE CLAMP® insert the actuating tool into the opening above the connection.
2. Insert the conductor into the corresponding connection opening.
3. To close the Push-in CAGE CLAMP® simply remove the tool - the conductor is then clamped firmly in place.

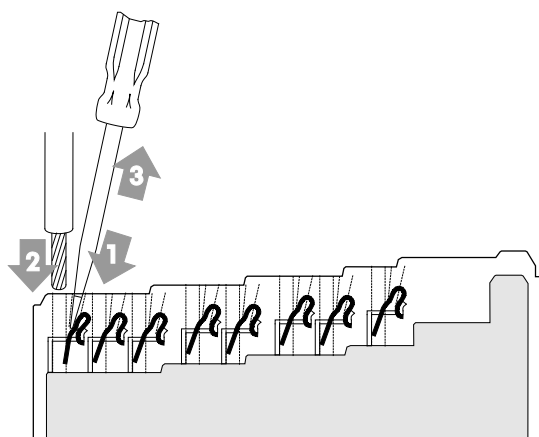


Figure 10: Connecting a Conductor to a Push-in CAGE CLAMP®

## 7 Using Interference-Free I/O Modules in Safety Related Applications

The 750-1515/040-000 I/O module is suited for use in interference-free safety circuits.

If the field side supply is shut down via a safety switching device, the safety function of the module is not active.

When the interference-free I/O module is used correctly in a safety related application, neither the SIL nor Performance Level achieved by the circuit nor the category will be influenced.

This requires that you adhere to the following notes and connection diagrams!

### 7.1 Important Notes

---

#### **WARNING**

##### **Use PELV supply only!**

Only a power supply unit with protective extra-low voltage (PELV) shall be used for the 24 V power supply.

---

---

#### **WARNING**

##### **Note maximum voltage!**

Please note that a maximum voltage  $U_{\max}$  only can act on the reaction-free I/O module in the event of a failure because irreparable damage could occur to the module otherwise.

For the reaction-free I/O module, the field supply voltage is:

$$U_{\max} < 32 \text{ V}$$

---

---

#### **NOTICE**

##### **Note IP54 protection class!**

IP54 protection class is absolutely mandatory. This means that the interference-free digital output module shall only be integrated and operated in switch boxes or switch cabinets complying with IP54 or higher.

---

---

#### **NOTICE**

##### **Avoid reverse supply of output!**

The 24 V power supply shall never be applied to the output of an interference-free digital output module. This wiring failure will not be detected by the system.

---

## NOTICE

### **Avoid reverse supply of module!**

A group of interference-free digital output modules shall only be supplied using a safety switching device. Reverse supply must absolutely be avoided.

---

## NOTICE

### **Avoid short circuits between outputs!**

Short circuits between outputs of different interference-free digital output modules must absolutely be avoided as they are not detected by the system.

---

According to EN ISO 13849-2, the following measures are required for an “external voltage” fault exclusion:

- Use of cables routed separately and
- Protection from external damage (e.g., caused by cable duct).

## 7.2 Connection for the I/O Module to Safety Switching Devices or Safety Modules

### 7.2.1 General Structure of a Potential Group

When using the interference-free I/O module 750-1515/040-000 in safety-related applications, the I/O modules belonging to a safety switching device shall be combined to form a potential group. The power supply of the potential group may only be provided via the following supply or filter modules:

Table 20: Supply or Filter Modules for Setting up a Potential Group

Supply Terminal Blocks	750-602/040-000 750-612/040-000 750-613/040-000
Field-side power supply filter Power supply filter	750-624/040-001 750-626/040-000

The potential group must be terminated by one of the listed supply or filter modules or by the end module 750-600/040-000.

Safety switch module/  
Safety module

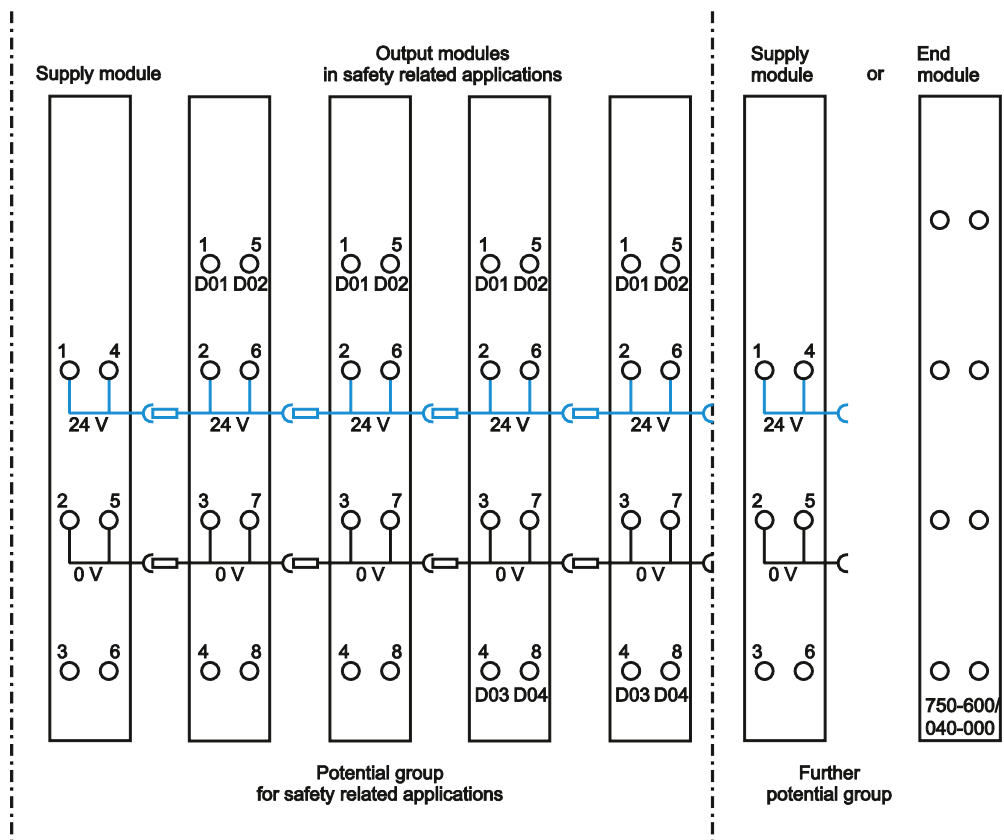


Figure 11: Setting up a Potential Group (Example)

## 7.2.2 Examples of Connection

### Two-Channel Single-Pole Power Supply Disconnection

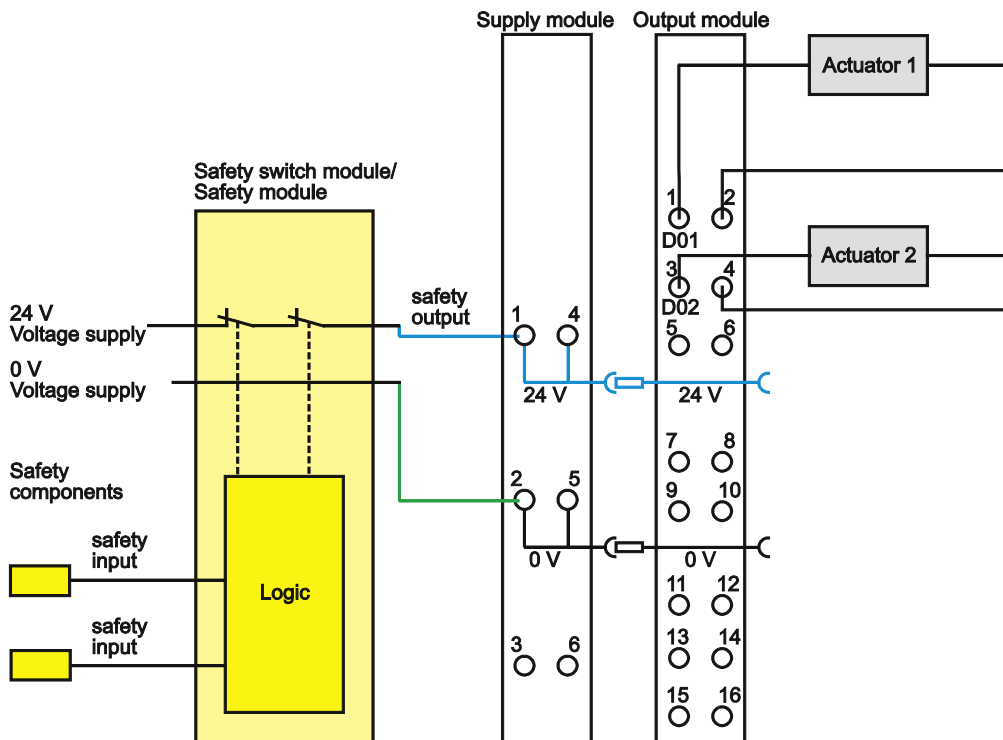


Figure 12: Two-Channel Single-Pole Disconnection

### Two-Channel Double-Pole Power Supply Disconnection

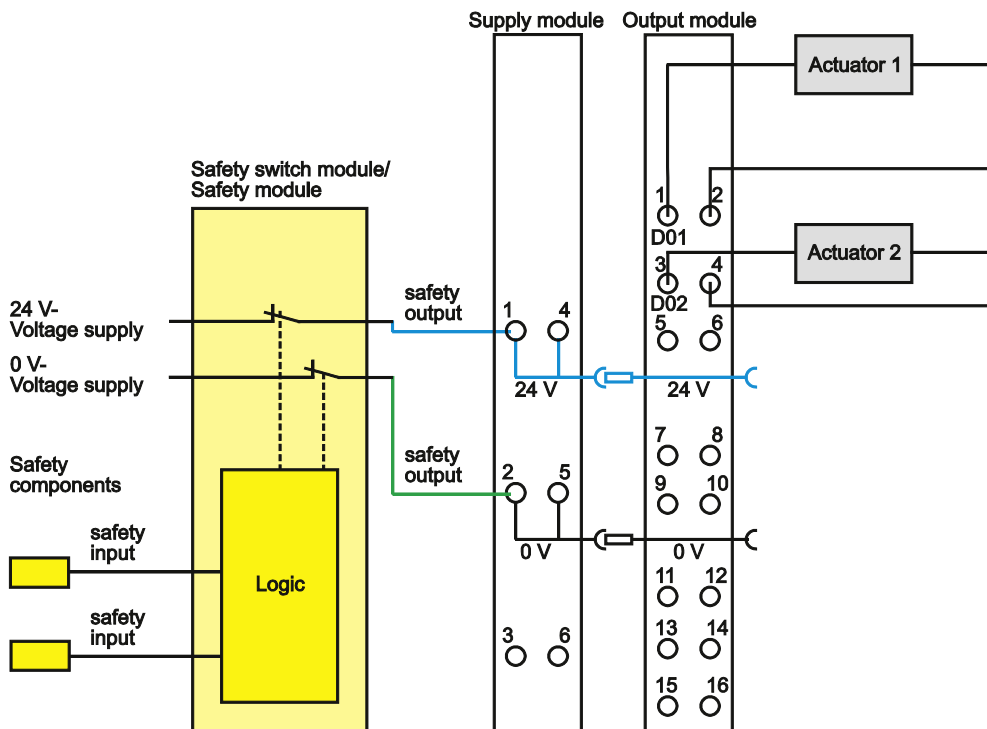


Figure 13: Two-Channel Double-Pole Disconnection

## 8 Use in Hazardous Environments

The **WAGO-I/O-SYSTEM 750** (electrical equipment) is designed for use in Zone 2 hazardous areas.

The following sections include both the general identification of components (devices) and the installation regulations to be observed. The individual subsections of the “Installation Regulations” section must be taken into account if the I/O module has the required approval or is subject to the range of application of the ATEX directive.

## 8.1 Marking Configuration Examples

### 8.1.1 Marking for Europe According to ATEX and IEC-Ex

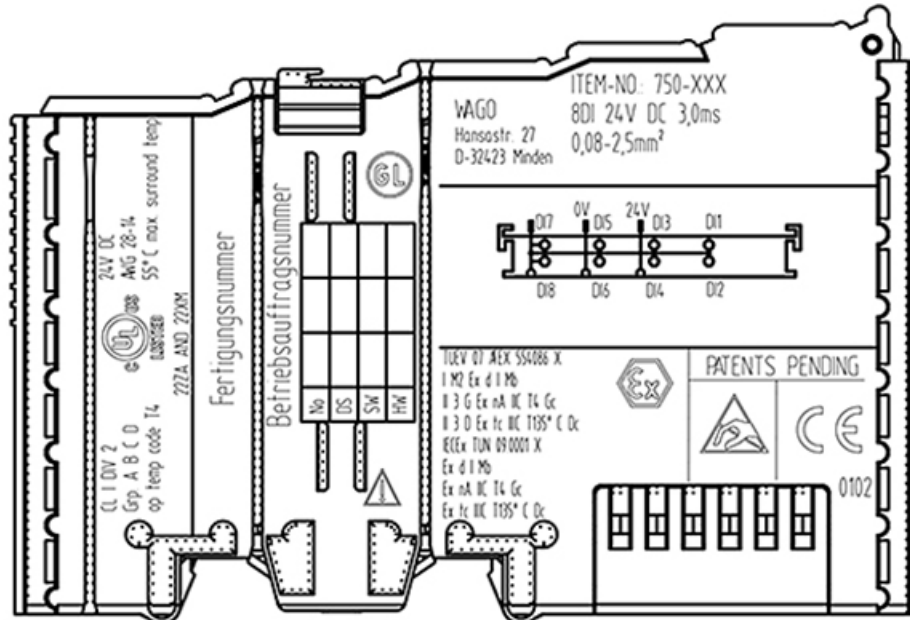


Figure 14: Side Marking Example for Approved I/O Modules According to ATEX and IECEx

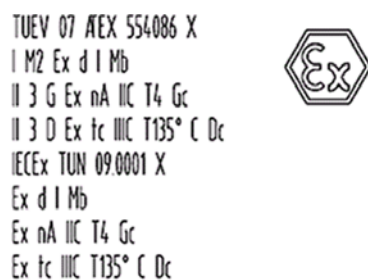


Figure 15: Text Detail – Marking Example for Approved I/O Modules According to ATEX and IECEx.

Table 21: Description of Marking Example for Approved I/O Modules According to ATEX and IECEx

Printing on Text	Description
TÜV 07 ATEX 554086 X IECEx TUN 09.0001 X	Approving authority and certificate numbers
<b>Dust</b>	
II	Equipment group: All except mining
3D	Category 3 (Zone 22)
Ex	Explosion protection mark
tc Dc	Type of protection and equipment protection level (EPL): protection by enclosure
IIIC	Explosion group of dust
T 135°C	Max. surface temperature of the enclosure (without a dust layer)
<b>Mining</b>	
I	Equipment group: Mining
M2	Category: High level of protection
Ex	Explosion protection mark
d Mb	Type of protection and equipment protection level (EPL): Flameproof enclosure
I	Explosion group for electrical equipment for mines susceptible to firedamp
<b>Gases</b>	
II	Equipment group: All except mining
3G	Category 3 (Zone 2)
Ex	Explosion protection mark
nA Gc	Type of protection and equipment protection level (EPL): Non-sparking equipment
nC Gc	Type of protection and equipment protection level (EPL): Sparking apparatus with protected contacts. A device which is so constructed that the external atmosphere cannot gain access to the interior
IIIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135°C



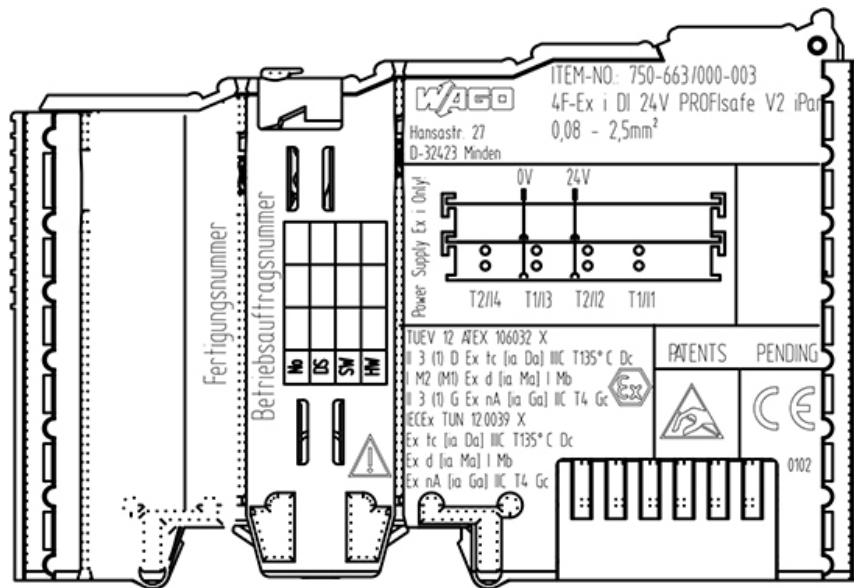


Figure 16: Side Marking Example for Approved Ex i I/O Modules According to ATEX and IECEX.


TUEV 12 ATEX 106032 X  
 II 3 (1) D Ex tc [ia Da] IIC T135° C Dc  
 I M2 (M1) Ex d [ia Ma] I Mb  
 II 3 (1) G Ex nA [ia Ga] IIC T4 Gc   
 IECEX TUN 12.0039 X  
 Ex tc [ia Da] IIC T135° C Dc  
 Ex d [ia Ma] I Mb  
 Ex nA [ia Ga] IIC T4 Gc

Figure 17: Text Detail – Marking Example for Approved Ex i I/O Modules According to ATEX and IECEX.

Table 22: Description of Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx

Inscription Text	Description
TÜV 07 ATEX 554086 X IECEX TUN 09.0001X	Approving authority and certificate numbers
TÜV 12 ATEX 106032 X IECEX TUN 12.0039 X	
<b>Dust</b>	
II	Equipment group: All except mining
3(1)D	Category 3 (Zone 22) equipment containing a safety device for a category 1 (Zone 20) equipment
3(2)D	Category 3 (Zone 22) equipment containing a safety device for a category 2 (Zone 21) equipment
Ex	Explosion protection mark
tc Dc	Type of protection and equipment protection level (EPL): protection by enclosure
[ia Da]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 20
[ib Db]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 21
IIIC	Explosion group of dust
T 135°C	Max. surface temperature of the enclosure (without a dust layer)
<b>Mining</b>	
I	Equipment Group: Mining
M2 (M1)	Category: High level of protection with electrical circuits which present a very high level of protection
Ex d Mb	Explosion protection mark with Type of protection and equipment protection level (EPL): Flameproof enclosure
[ia Ma]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety electrical circuits
I	Explosion group for electrical equipment for mines susceptible to firedamp

Table 22: Description of Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx

<b>Gases</b>	
II	Equipment group: All except mining
3(1)G	Category 3 (Zone 2) equipment containing a safety device for a category 1 (Zone 0) equipment
3(2)G	Category 3 (Zone 2) equipment containing a safety device for a category 2 (Zone 1) equipment
Ex	Explosion protection mark
nA Gc	Type of protection and equipment protection level (EPL): Non-sparking equipment
[ia Ga]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 0
[ia Gb]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 1
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135°C

### 8.1.2 Marking for America According to NEC 500

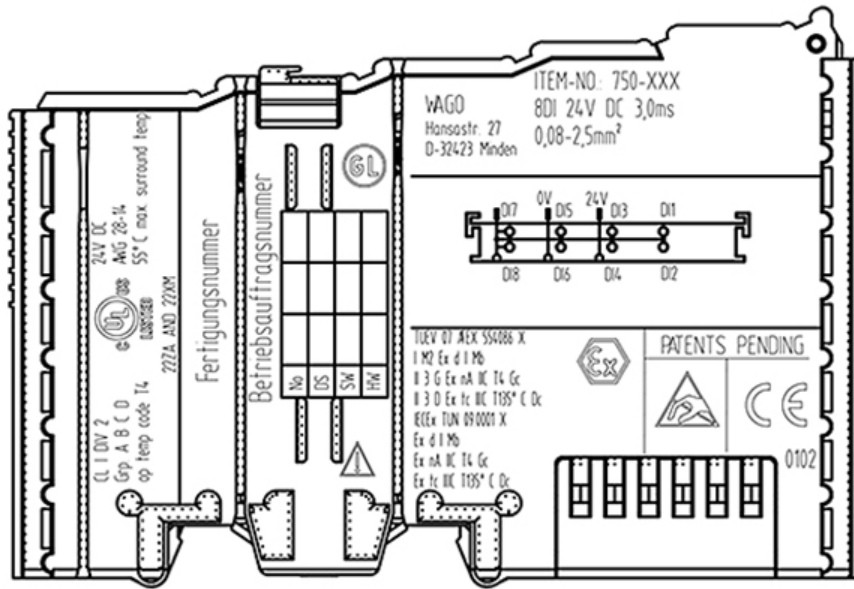


Figure 18: Side Marking Example for I/O Modules According to NEC 500

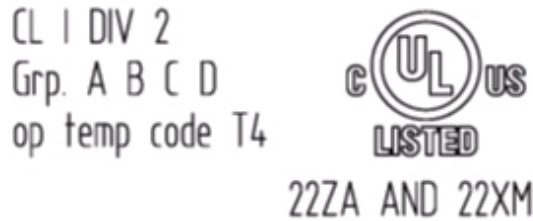


Figure 19: Text Detail – Marking Example for Approved I/O Modules According to NEC 500

Table 23: Description of Marking Example for Approved I/O Modules According to NEC 500

Printing on Text	Description
CL I	Explosion protection group (condition of use category)
DIV 2	Area of application
Grp. ABCD	Explosion group (gas group)
Op temp code T4	Temperature class

## 8.2 Installation Regulations

For the installation and operation of electrical equipment in hazardous areas, the valid national and international rules and regulations which are applicable at the installation location must be carefully followed.

### 8.2.1 Special Conditions for Safe Use (TÜV 14 ATEX 148929 X)

1. The modules of the WAGO-I/O-SYSTEM 750-\*\*\* have to be erected in such a way, that corresponding to EN 60079-15 a degree of protection of at least IP 54 according to EN 60529 is achieved.
2. Measures have to be taken, external to the modules, to provide a transient protection that ensures that the rated voltage, connected to the power supply terminals, is not exceeded by more than 40 %.
3. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted if no explosive atmosphere exists. This although applies for the all switches, interfaces (Fieldbus, Ethernet, Serial) and the SD-card.
4. The ambient temperature range is:  $0\text{ °C} \leq T_{\text{amb}} \leq +60\text{ °C}$   
The ambient temperature range for modules with suffix extension /025-\*\*\*\* is:  $-20\text{ °C} \leq T_{\text{amb}} \leq +60\text{ °C}$

## 8.2.2 Special Conditions for Safe Use (ATEX Certificate TÜV 12 ATEX 106032 X)

1. For use as Gc- or Dc-apparatus (in zone 2 or 22) the Field bus Independent I/O Modules WAGO-I/O-SYSTEM 750-\*\*\* Ex i shall be erected in an enclosure that fulfils the requirements of the applicable standards (see the marking) EN 60079-0, EN 60079-11, EN 60079-15 and EN 60079-31. For use as group I electrical apparatus M2 the apparatus shall be erected in an enclosure that ensures a sufficient protection according to EN 60079-0 and EN 60079-1 and the degree of protection IP64. The compliance of these requirements and the correct installation into an enclosure or a control cabinet of the devices shall be certified by an ExNB.
2. Measures have to be taken outside of the device that the rating voltage is not being exceeded of more than 40 % because of transient disturbances.
3. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted during installation, for maintenance or for repair purposes. The temporal coincidence of explosion hazardous atmosphere and installation, maintenance resp. repair purposes shall be excluded.
4. For the type the following shall be considered: The Interface circuits shall be limited to overvoltage category I/II (non mains/mains circuits) as defined in EN 60664-1.

### 8.2.3 Special Conditions for Safe Use (IEC-Ex Certificate TUN 14.0035X)

1. The modules of the WAGO-I/O-SYSTEM 750-\*\*\* have to be erected in such a way, that corresponding to IEC 60079-15 a degree of protection of at least IP 54 according to IEC 60529 is achieved.
2. Measures have to be taken, external to the modules, to provide a transient protection that ensures that the rated voltage, connected to the power supply terminals, is not exceeded by more than 40 %.
3. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted if no explosive atmosphere exists. This although applies for the all switches, interfaces (Fieldbus, Ethernet, Serial) and the SD-card.
4. The ambient temperature range is:  $0\text{ °C} \leq T_{amb} \leq +60\text{ °C}$   
The ambient temperature range for modules with suffix extension /025-\*\*\*\* is:  $-20\text{ °C} \leq T_{amb} \leq +60\text{ °C}$



## 8.2.4 Special Conditions for Safe Use (IEC-Ex Certificate IECEx TUN 12.0039 X)

1. For use as Gc- or Dc-apparatus (in zone 2 or 22) the Field bus independent I/O Modules WAGO-I/O-SYSTEM 750-\*\*\* Ex i shall be erected in an enclosure that fulfils the requirements of the applicable standards (see the marking) IEC 60079-0, IEC 60079-11, IEC 60079-15, IEC 60079-31.  
For use as group I electrical apparatus M2 the apparatus shall be erected in an enclosure that ensures a sufficient protection according to IEC 60079-0 and IEC 60079-1 and the degree of protection IP64.  
The compliance of these requirements and the correct installation into an enclosure or a control cabinet of the devices shall be certified by an ExCB.
2. Measures have to be taken outside of the device that the rating voltage is not being exceeded of more than 40 % because of transient disturbances.
3. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted during installation, for maintenance or for repair purposes.  
The temporal coincidence of explosion hazardous atmosphere and installation, maintenance resp. repair purposes shall be excluded.
4. For the type the following shall be considered: The Interface circuits shall be limited to overvoltage category I/II (non mains/mains circuits) as defined in IEC 60664-1.

## 8.2.5 Special Conditions for Safe Use according to ANSI/ISA 12.12.01

- A. “This equipment is suitable for use in Class I, Division 2, Groups A, B, C, D or non-hazardous locations only.”
- B. “This equipment is to be fitted within tool-secured enclosures only.”
- C. “WARNING Explosion hazard - substitution of components may impair suitability for Class I, Div. 2.”
- D. “WARNING – Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous” has to be placed near each operator accessible connector and fuse holder.
- E. When a fuse is provided, the following information shall be provided: “A switch suitable for the location where the equipment is installed shall be provided to remove the power from the fuse.”
- F. For devices with EtherCAT/Ethernet connectors “Only for use in LAN, not for connection to telecommunication circuits.”
- G. “WARNING - Use Module 750-642 only with antenna module 758-910.”
- H. For Couplers/Controllers and Economy bus modules only: The instructions shall contain the following: “The configuration interface Service connector is for temporary connection only. Do not connect or disconnect unless the area is known to be non-hazardous. Connection or disconnection in an explosive atmosphere could result in an explosion.”
- I. Modules containing fuses only: “WARNING - Devices containing fuses must not be fitted into circuits subject to over loads, e.g. motor circuits.”
- J. Modules containing SD card reader sockets only: “WARNING - Do not connect or disconnect SD-Card while circuit is live unless the area is known to be free of ignitable concentrations of flammable gases or vapors.”
- K. The modules 750-439, 750-538, 750-633, 750-663/000-003 shall only be supplied with 750-606 or 750-625/000-001.
- L. Module 750-538 only “In Hazardous Locations, Non-Incendive only when installed per Control Drawing No. 750-538”.

---

### *Information*



#### **Additional Information**

Proof of certification is available on request.

Also take note of the information given on the operating and assembly instructions.

The manual, containing these special conditions for safe use, must be readily available to the user.

---

## List of Figures

Figure 1: View .....	15
Figure 2: Data Contacts .....	16
Figure 3: Power Jumper Contacts .....	17
Figure 4: Push-in CAGE CLAMP® Connectors.....	18
Figure 5: Display Elements .....	19
Figure 6: Schematic Diagram.....	20
Figure 7: Insert I/O Module (Example).....	31
Figure 8: Snap the I/O Module into Place (Example).....	32
Figure 9: Removing the I/O Module (Example) .....	32
Figure 10: Connecting a Conductor to a Push-in CAGE CLAMP® .....	33
Figure 11: Setting up a Potential Group (Example).....	36
Figure 12: Two-Channel Single-Pole Disconnection.....	37
Figure 13: Two-Channel Double-Pole Disconnection .....	37
Figure 14: Side Marking Example for Approved I/O Modules According to ATEX and IECEx .....	39
Figure 15: Text Detail – Marking Example for Approved I/O Modules According to ATEX and IECEx .....	39
Figure 16: Side Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx .....	41
Figure 17: Text Detail – Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx .....	41
Figure 18: Side Marking Example for I/O Modules According to NEC 500 .....	44
Figure 19: Text Detail – Marking Example for Approved I/O Modules According to NEC 500.....	44

## List of Tables

Table 1: Number Notation.....	8
Table 2: Font Conventions .....	8
Table 3: Legend for Figure “View” .....	15
Table 4: Legend for Figure “Power Jumper Contacts” .....	17
Table 5: Legend for Figure “Push-in CAGE CLAMP® Connectors” .....	18
Table 6: Legend for Figure “Display Elements” .....	19
Table 7: Technical Data – Device .....	21
Table 8: Technical Data – Supply .....	21
Table 9: Technical Data – Communication.....	21
Table 10: Technical Data – Outputs.....	22
Table 11: Technical Data – Field Wiring.....	22
Table 12: Technical Data – Power Jumper Contacts .....	22
Table 13: Technical Data – Data Contacts .....	22
Table 14: Technical Data – Mechanical Conditions .....	22
Table 15: Technical Data – Climatic Environmental Conditions .....	22
Table 16: Climatic and Mechanical Environmental Conditions .....	25
Table 17: EMC – Immunity to Interference.....	26
Table 18: EMC – Emission of Interference.....	27
Table 19: Output Bits .....	29
Table 20: Supply or Filter Modules for Setting up a Potential Group .....	36
Table 21: Description of Marking Example for Approved I/O Modules According to ATEX and IECEx .....	40
Table 22: Description of Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx .....	42
Table 23: Description of Marking Example for Approved I/O Modules According to NEC 500.....	44



# WE! INNOVATE!

WAGO Kontakttechnik GmbH & Co. KG  
Postfach 2880 • D-32385 Minden  
Hansastraße 27 • D-32423 Minden  
Phone: 05 71/8 87 – 0  
Fax: 05 71/8 87 – 1 69  
E-Mail: [info@wago.com](mailto:info@wago.com)  
Internet: <http://www.wago.com>

