


# WAGO-I/O-SYSTEM 750

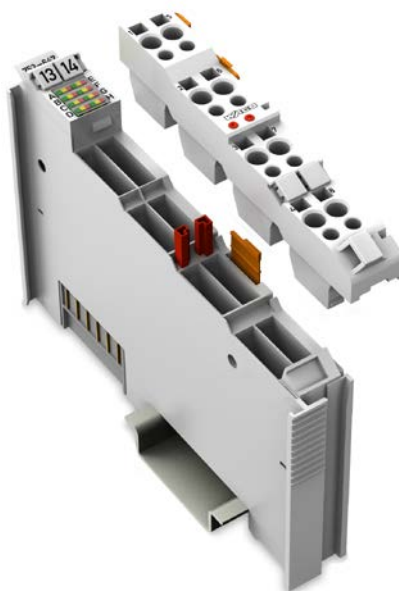

## 753-647 DALI Multi-Master Module

© 2018 WAGO Kontakttechnik GmbH & Co. KG  
All rights reserved.

### **WAGO Kontakttechnik GmbH & Co. KG**

Hansastraße 27  
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0  
Fax: +49 (0) 571/8 87 – 1 69

E-Mail: [info@wago.com](mailto:info@wago.com)

Web: <http://www.wago.com>

### **Technical Support**

Phone: +49 (0) 571/8 87 – 5 55  
Fax: +49 (0) 571/8 87 – 85 55

E-Mail: [support@wago.com](mailto:support@wago.com)

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: [documentation@wago.com](mailto:documentation@wago.com)

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

WAGO is a registered trademark of WAGO Verwaltungsgesellschaft mbH.

## Table of Contents

<b>1</b>	<b>Notes about this Documentation .....</b>	<b>6</b>
1.1	Validity of this Documentation.....	6
1.2	Copyright.....	6
1.3	Symbols .....	7
1.4	Number Notation .....	9
1.5	Font Conventions .....	9
<b>2</b>	<b>Important Notes .....</b>	<b>10</b>
2.1	Legal Bases.....	10
2.1.1	Subject to Changes.....	10
2.1.2	Personnel Qualifications .....	10
2.1.3	Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions .....	10
2.1.4	Technical Condition of Specified Devices.....	11
2.2	Safety Advice (Precautions) .....	12
2.3	Requirements .....	14
2.4	Compatibility List .....	15
<b>3</b>	<b>Device Description.....</b>	<b>16</b>
3.1	Device-Specific Safety Information .....	16
3.2	Abbreviations and Terms.....	17
3.3	General Description.....	18
3.4	View .....	21
3.5	Connectors .....	22
3.5.1	Data Contacts/Local Bus.....	22
3.5.2	Power Jumper Contacts/Field Supply .....	23
3.5.3	CAGE CLAMP® Connectors.....	23
3.6	Display Elements.....	25
3.7	Operating Elements.....	25
3.8	Schematic Diagram .....	26
3.9	Technical Data .....	27
3.9.1	Device.....	27
3.9.2	Supply.....	27
3.9.3	Communication .....	27
3.9.4	Connection Type.....	27
3.9.5	Climatic Environmental Conditions.....	28
3.10	Approvals .....	29
3.11	Standards and Guidelines .....	30
<b>4</b>	<b>Process Image.....</b>	<b>31</b>
4.1	Watchdog .....	31
4.2	Dedicated IEC Application .....	32
4.3	Full Mode .....	32
4.4	Easy Mode .....	33
4.4.1	Latching Relay Function.....	33
4.4.2	Dim in 1- and 2-Button Mode .....	33
4.4.3	Process Image Overview in the “Easy Mode”.....	34

4.4.4	Activating/De-activating 64 DALI Actuators, Dimming .....	35
4.4.5	Activating/De-activating 16 Groups, Dimming .....	36
4.4.6	Activating/De-activating 16 Scenes .....	37
<b>5</b>	<b>Mounting.....</b>	<b>38</b>
5.1	Mounting Sequence.....	38
5.2	Inserting and Removing Devices .....	39
5.2.1	Inserting the I/O Module .....	39
5.2.2	Removing the I/O Module .....	40
5.3	I/O Modules with Pluggable Wiring Level (Series 753) .....	41
5.3.1	Coding .....	42
5.3.2	Plug Removal .....	44
<b>6</b>	<b>Connect Devices .....</b>	<b>45</b>
6.1	Connecting a Conductor to the CAGE CLAMP® .....	45
6.2	Power Supply for Marine Applications .....	46
6.3	Installation Notes .....	48
6.3.1	Module Assembly.....	48
6.3.2	Module Supply .....	48
6.3.2.1	Power Supply Configuration for 753-620 .....	49
6.3.2.2	Power Supply Configuration for 787-1007 .....	50
6.3.3	DALI Bus Line.....	51
6.3.4	DALI Bus Topology.....	51
<b>7</b>	<b>Commissioning .....</b>	<b>53</b>
7.1	Preparation.....	53
7.2	Accessing the DALI Multi-Master Module .....	54
7.3	Module Configuration Notes .....	54
7.4	“Construction Site Function” for Initial Startup.....	54
7.5	Data Management Notes.....	55
7.6	Configuration of the DALI Network Using the WAGO DALI Configurator.....	55
<b>8</b>	<b>Diagnostics.....</b>	<b>56</b>
8.1	LED “A” Status Diagnosis .....	56
8.2	LED “B” Status Diagnosis .....	56
8.3	LED “C” Status Diagnosis.....	57
8.4	LED “D” Status Diagnosis.....	57
8.5	LED “E” Status Diagnosis .....	58
8.6	LED “F” Status Diagnosis .....	58
8.7	LED “G” Status Diagnosis.....	59
8.8	LED “H” Status Diagnosis.....	60
<b>9</b>	<b>Use in Hazardous Environments .....</b>	<b>61</b>
9.1	Marking Configuration Examples .....	62
9.1.1	Marking for Europe According to ATEX and IECEx.....	62
9.1.2	Marking for America (NEC) and Canada (CEC) .....	66
9.2	Installation Regulations.....	69
9.2.1	Special Notes Regarding Explosion Protection .....	69
9.2.2	Special Notes Regarding ANSI/ISA Ex .....	71

<b>10 Appendix .....</b>	<b>72</b>
10.1 Device Types.....	72
<b>Glossary.....</b>	<b>73</b>
<b>List of Figures .....</b>	<b>76</b>
<b>List of Tables .....</b>	<b>77</b>

# 1 Notes about this Documentation



## Note

### Always retain this documentation!

This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user. In addition, ensure that any supplement to this documentation is included, if necessary.

## 1.1 Validity of this Documentation

This documentation is only applicable to the I/O module 753-647 (DALI Multi-Master Module).

The I/O module 753-647 shall only be installed and operated according to the instructions in this manual and in the manual for the used fieldbus coupler/controller.

## NOTICE

### Consider power layout of the WAGO-I/O-SYSTEM 750!

In addition to these operating instructions, you will also need the manual for the used fieldbus coupler/controller, which can be downloaded at [www.wago.com](http://www.wago.com). There, you can obtain important information including information on electrical isolation, system power and supply specifications.

## 1.2 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.

## 1.3 Symbols

---

 **DANGER**

**Personal Injury!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

---

---

 **DANGER**

**Personal Injury Caused by Electric Current!**

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

---

---

 **WARNING**

**Personal Injury!**

Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.

---

---

 **CAUTION**

**Personal Injury!**

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

---

---

**NOTICE**

**Damage to Property!**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

---

---

**NOTICE**

**Damage to Property Caused by Electrostatic Discharge (ESD)!**

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

---

---

**Note**

**Important Note!**

Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.

---



## *Information*

**Additional Information:**

Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

---



## 1.4 Number Notation

Table 1: Number Notation

Number Code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated with dots (.)

## 1.5 Font Conventions

Table 2: Font Conventions

Font Type	Indicates
<i>italic</i>	Names of paths and data files are marked in italic-type. e.g.: <i>C:\Program Files\WAGO Software</i>
<b>Menu</b>	Menu items are marked in bold letters. e.g.: <b>Save</b>
<b>&gt;</b>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: <b>File &gt; New</b>
<b>Input</b>	Designation of input or optional fields are marked in bold letters, e.g.: <b>Start of measurement range</b>
"Value"	Input or selective values are marked in inverted commas. e.g.: Enter the value "4 mA" under <b>Start of measurement range</b> .
<b>[Button]</b>	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: <b>[Input]</b>
<b>[Key]</b>	Keys are marked with bold letters in square brackets. e.g.: <b>[F5]</b>

## 2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

### 2.1 Legal Bases

#### 2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

#### 2.1.2 Personnel Qualifications

All sequences implemented on WAGO-I/O-SYSTEM 750 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the coupler or controller should always be carried out by qualified personnel with sufficient skills in PLC programming.

#### 2.1.3 Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions

Fieldbus couplers, fieldbus controllers and I/O modules found in the modular WAGO-I/O-SYSTEM 750 receive digital and analog signals from sensors and transmit them to actuators or higher-level control systems. Using programmable controllers, the signals can also be (pre-) processed.

The devices have been developed for use in an environment that meets the IP20 protection class criteria. Protection against finger injury and solid impurities up to 12.5 mm diameter is assured; protection against water damage is not ensured. Unless otherwise specified, operation of the devices in wet and dusty environments is prohibited.

Operating the WAGO-I/O-SYSTEM 750 devices in home applications without further measures is only permitted if they meet the emission limits (emissions of interference) according to EN 61000-6-3. You will find the relevant information in the section "Device Description" > "Standards and Guidelines" in the manual for the used fieldbus coupler/controller.

Appropriate housing (per 2014/34/EU) is required when operating the WAGO-I/O-SYSTEM 750 in hazardous environments. Please note that a prototype test

---

certificate must be obtained that confirms the correct installation of the system in a housing or switch cabinet.

The implementation of safety functions such as EMERGENCY STOP or safety door monitoring must only be performed by the F-I/O modules within the modular WAGO-I/O-SYSTEM 750. Only these safe F-I/O modules ensure functional safety in accordance with the latest international standards. WAGO's interference-free output modules can be controlled by the safety function.

#### **2.1.4 Technical Condition of Specified Devices**

The devices to be supplied ex works are equipped with hardware and software configurations, which meet the individual application requirements. These modules contain no parts that can be serviced or repaired by the user. The following actions will result in the exclusion of liability on the part of WAGO Kontakttechnik GmbH & Co. KG:

- Repairs,
- Changes to the hardware or software that are not described in the operating instructions,
- Improper use of the components.

Further details are given in the contractual agreements. Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

## 2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



### **DANGER**

#### **Do not work on devices while energized!**

All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.

### **DANGER**

#### **Install the device only in appropriate housings, cabinets or in electrical operation rooms!**

The WAGO-I/O-SYSTEM 750 and its components are an open system. As such, install the system and its components exclusively in appropriate housings, cabinets or in electrical operation rooms. Allow access to such equipment and fixtures to authorized, qualified staff only by means of specific keys or tools.

### **NOTICE**

#### **Replace defective or damaged devices!**

Replace defective or damaged device/module (e.g., in the event of deformed contacts), since the long-term functionality of device/module involved can no longer be ensured.

### **NOTICE**

#### **Protect the components against materials having seeping and insulating properties!**

The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

### **NOTICE**

#### **Clean only with permitted materials!**

Clean housing and soiled contacts with propanol.

---

## NOTICE

**Do not use any contact spray!**

Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

---

---

## NOTICE

**Do not reverse the polarity of connection lines!**

Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.

---

---

## NOTICE



**Avoid electrostatic discharge!**

The devices are equipped with electronic components that may be destroyed by electrostatic discharge when touched. Please observe the safety precautions against electrostatic discharge per DIN EN 61340-5-1/-3. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly grounded.

---

## 2.3 Requirements

Table 3: Required Hardware of the WAGO-I/O-SYSTEM

Component	Reference source (order number)
Fieldbus controller/PLC WAGO-I/O-SYSTEM 750 e. g. ETHERNET PLC (750-881)	WAGO (750-881)
DALI Multi-Master Module	WAGO (753-647)
End Module	WAGO (750-600)
Current supply for the indirect supply of the DALI Bus participants via the DALI Multi-Master Module (753-647), e. g.: DALI Multi-Master DC/DC Converter or Current supply	WAGO (753-620) WAGO (787-1007)

## 2.4 Compatibility List

The following controllers are compatible with the DALI\_647\_02.lib and/or DALI\_647\_04.lib libraries:

Table 4: Controller Compatibility List

Item No.	Name	From FW-Version	*_02.lib	*_04.lib
750-819	PFC LON	09	x	
750-829	PFC BACnet MS/TP	07	x	x
750-830	PFC BACnet/IP	05	x	
750-831	PFC BACnet/IP	07	x	x
750-833	PFC PROFIBUS	17	x	
750-837	PFC CANopen	17	x	
750-838	PFC CANopen	17	x	
750-841	PFC ETHERNET	21	x	
750-842	PFC ETHERNET	19	x	
750-849	PFC KNX IP	05	x	
750-852	PFC ETHERNET	09	x	x
750-871	PFC ETHERNET	09	x	
750-872	PFC ETHERNET	05	x	
750-873	PFC ETHERNET	05	x	
750-880	PFC ETHERNET	09	x	x
750-881	PFC ETHERNET	09	x	x
750-882	PFC ETHERNET	09	x	x
750-884	PFC ETHERNET	09	x	x
750-885	PFC ETHERNET	09	x	x
750-889	PFC KNX IP	07	x	x
750-8202	PFC200 ETHERNET	08	x	x
750-8203	PFC200 ETHERNET	08	x	x
750-8204	PFC200 ETHERNET	08	x	x
750-8206	PFC200 ETHERNET	08	x	x
750-8207	PFC200 ETHERNET	08	x	x
750-8208	PFC200 ETHERNET	08	x	x
758-874/000-xxx	I/O-IPC	09	x	x
758-875/000-xxx	I/O-IPC	09	x	x
758-876/000-xxx	I/O-IPC	09	x	x

## 3 Device Description

### 3.1 Device-Specific Safety Information

---

#### Note



**Required accessories: Power supply unit for indirect power supply via the DALI Multi-Master Module (753-647), Item No.: 753-620 or 787-1007!**

Please note that a suitable power supply is required for the network slaves via the DALI Multi-Master Module, such as the power supply unit for the DALI Multi-Master Module (753-647), Item No.: 787-1007, or the DALI Multi-Master DC/DC Converter (753-620).

These power supplies do not provide direct power to the DALI bus, but only indirect power supply via the DALI Multi-Master Module. They ensure electrical isolation for this between the DALI bus and the I/O module required for the installation of 230 V electrical loads.

---

#### NOTICE

**Destruction of DALI subscribers due to misuse of the WAGO power supply (787-1007)!**

Please note that the power supply by WAGO (Item No.: 787-1007) may only be connected to the DALI Multi-Master Module (753-647). The power supply for the DALI bus is provided indirectly via the DALI Multi-Master Module. A direction connect to the DALI bus can result in the destruction of the attached DALI slaves. Therefore, never connect the WAGO Power Supply (787-1007) to a DALI network directly without a DALI Multi-Master Module (753-647) connected between the power supply and the network.

---

#### NOTICE

**No reverse voltage protection!**

The module is not protected against incorrect connection of the connecting leads.

---

#### Note



**Perform configuration using the WAGO DALI Configurator!**

You must use the WAGO DALI Configurator for configuration of the DALI Multi-Master Module (753-647) and the DALI Line.

You can download the WAGO DALI Configurator as a stand-alone tool from the WAGO Internet site at:

[www.wago.com](http://www.wago.com)

---



## Information



### More information about the WAGO DALI Configurator!

A detailed description of the WAGO DALI Configurator is given in the manual for the configurator.

You can download this manual free of charge from the WAGO Internet site at:

[www.wago.com](http://www.wago.com)

## 3.2 Abbreviations and Terms

Table 5: Abbreviations and Terms Used in this Manual

Abbreviation/ Term	Explanation
Control Device	IEC term for the DALI (Multi)-Master (also, active sensors)
Control Gear	IEC term for passive electronic ballast (actuators)
DALI	“Digital Addressable Lighting Interface” (protocol for lighting control)
ECG	Electronic control gear (ballast unit)
PI	Process image of I/O module
PAA	I/O module output process data
PAE	I/O module input process data

## Information



### More definitions of terms given in the glossary.

Further, detailed explanations and definitions of technical terms used in this manual are given in alphabetical order in the section “Glossary.”

### 3.3 General Description

The DALI Multi-Master Module is used to connect a DALI network (DALI Line) to a WAGO fieldbus node with PLCs and 750/753 Series I/O modules.

This module is used in applications for digital control of lighting actuators, such as control gear (electronic ballasts) in building automation and for evaluation of DALI sensors.

DALI enables complex lighting scenes to be implemented with group functions.

Using the WAGO-I/O-SYSTEM, DALI control devices are seamlessly integrated with all supported BA and fieldbus protocols.

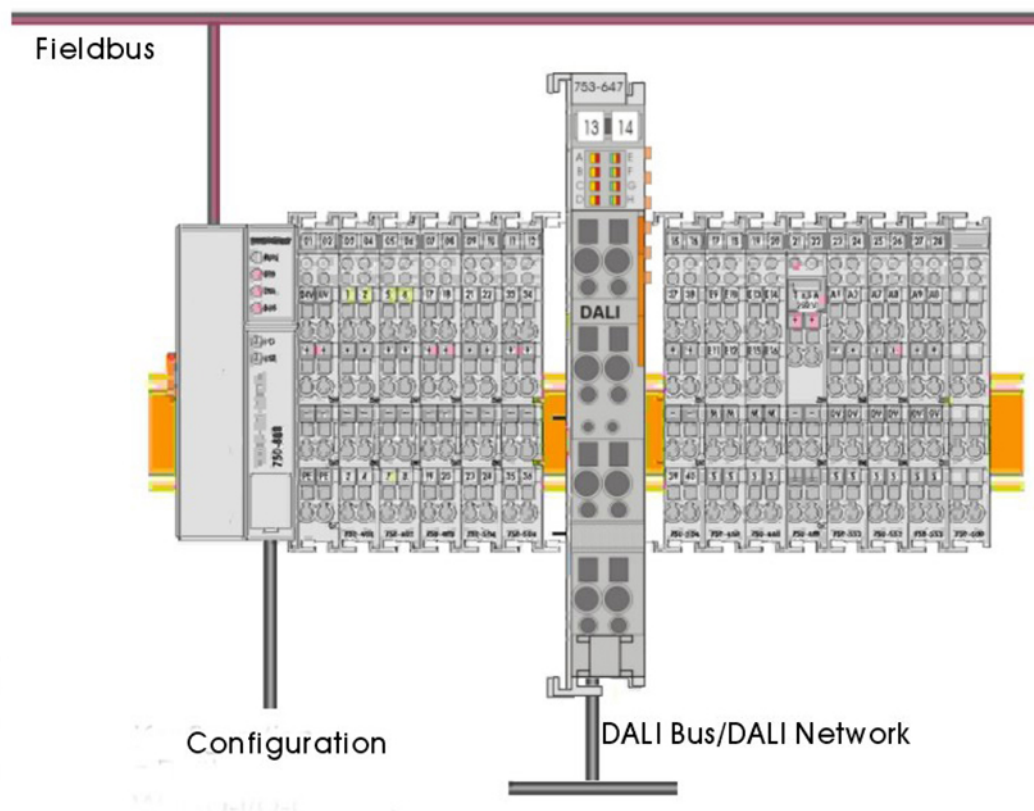


Figure 1: Overview of DALI Network with a WAGO I/O SYSTEM 750

The 753-647 DALI Multi-Master Module complies with the DALI standard according to DIN EN 62386:2009. This manufacturer-independent protocol ensures interoperability of DALI devices in lighting applications.

This module is designed so as to allow future-oriented adaptation to the current DALI standard by simple updating using a firmware update via the ETHERNET fieldbus and PC software.

Two options are available for power supply for the DALI Multi-Master Module; via the DALI Multi-Master DC/DC Converter (753-620), which provides power for one DALI Multi-Master Module from the 24 V system power supply, or via the 787-1007 230 V primary switch mode power supply unit for parallel supply of

several DALI Multi-Master modes (see section “Connect Devices” > ... > ”Module Supply”).

The DALI Multi-Master Module supplies bus power of 200 mA for power supply of any number of DALI bus slaves per line.

The maximum number of bus slaves depends on the sum current consumption of the specific devices and the address range for the actuators and sensors.

The module is equipped with 2 connections for the bus line (+DALI and -DALI) for connection of the DALI bus (DALI line).

The bus line is installed in free topology. Ring-shaped links are prohibited. As the length of the line of a bus line is limited and as the maximum line lengths between the bus devices may not be exceeded, general DALI guidelines must be observed (see section “Connect Devices” > ... > “Installation Notes”).

The module supports a total of 64 addresses for control gear (ECGs) and 64 addresses for control devices (DALI sensors). You can select from several addressing methods for this.

After successful address allocation, 16 groups and 16 scenes can be assigned to each of the DAL ECGs. A further 16 virtual groups can also be configured on the DALI bus.

The WAGO-I/O-PRO programming software is used to program the fieldbus nodes.

An extensive IEC-61131-3 library is available with simple modules for implementing complex lighting applications.

The WAGO DALI Configurator can be used for simple commissioning and maintenance and for easy configuration of the DALI Multi-Master Module and the interconnected DALI line.

---

## Information



### **More information about the WAGO DALI Configurator**

You can download the WAGO DALI Configurator as a stand-alone tool from the WAGO Internet site.

You can download the manual for the software tool from the WAGO Internet site at: [www.wago.com](http://www.wago.com).

---

---

## Information



### **More information about WAGO-I/O-PRO**

You can order the WAGO software under the following item number:  
WAGO-I/O-PRO programming tool (Item No.: 759-333)

You can download the manual for the software tool free of charge from the WAGO Internet site at:

[www.wago.com](http://www.wago.com)

---

The DALI Multi-Master Module can be operated in two different modes.

- “Full mode”
- “Easy mode”

In the “Full mode”, acyclic data transfer with the PLC is implemented using a mailbox interface via acyclic transmission channels (see section “Process Image” > ... > “Full Mode”).

As mentioned above, an “Easy mode” is also available which enables lighting control using simple binary signals without any complicated PLC programming (see section “Process Image” > ... > “Easy Mode”).

The “Easy mode” is the standard state for the DALI Multi-Master Module. The “Full mode” can be activated via PLC modules.

The behavior in the event of a local bus failure or lack of communication with the higher-level controller can be monitored by enabling a watchdog (see section “Process Image” > ... > “Watchdog”).

8 colored LEDs on the I/O module enclosure signal active and inactive operating modes, data transfer via DALI and the data bus, application of DALI bus power and internal statuses or errors of the I/O module (see section “Display Elements”).

The I/O module 753-647 can be used with fieldbus couplers and fieldbus controllers of the WAGO-I/O-SYSTEM 750.

### 3.4 View

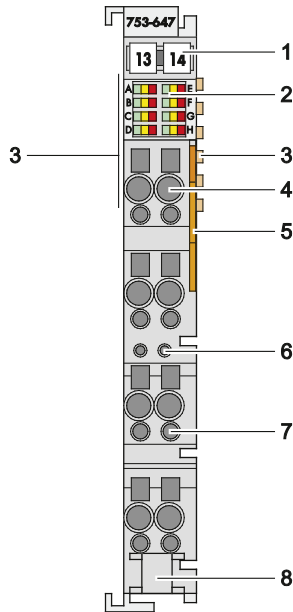


Figure 2: View

Table 6: Legend for Figure "View"

Pos.	Description	Details See Section
1	Marking possibility with Mini-WSB	---
2	Status-LEDs	"Device Description" > "Display Elements"
3	Data contacts	"Device Description" > "Connectors"
4	CAGE CLAMP® connectors	"Device Description" > "Connectors"
5	Pull tab	"Mounting" > "I/O Modules with Pluggable Wiring Level (Series 753)"
6	Coding possibility with coding fingers	"Mounting" > "Coding"
7	Test port	---
8	Fixing lug for cable ties	"Mounting" > "I/O Modules with Pluggable Wiring Level (Series 753)"

## 3.5 Connectors

### 3.5.1 Data Contacts/Local Bus

Communication between the fieldbus coupler/controller and the I/O modules as well as the system supply of the I/O modules is carried out via the local bus. It is comprised of 6 data contacts, which are available as self-cleaning gold spring contacts.

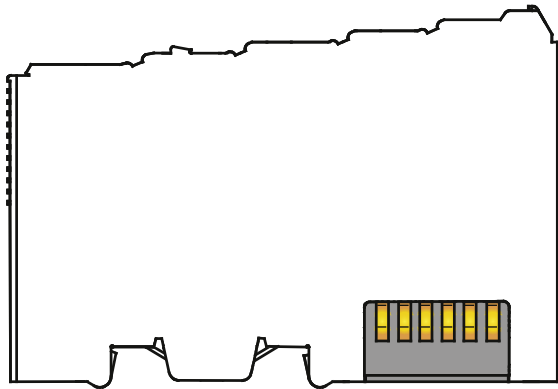


Figure 3: Data Contacts

### NOTICE

**Do not place the I/O modules on the gold spring contacts!**

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!

### NOTICE



**Ensure that the environment is well grounded!**

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. data contacts.

### 3.5.2 Power Jumper Contacts/Field Supply

The I/O module 753-647 has no power jumper contacts.

## Note



### Use a power supply module!

Use a power supply module for field-side power supply of downstream I/O modules.

### 3.5.3 CAGE CLAMP® Connectors

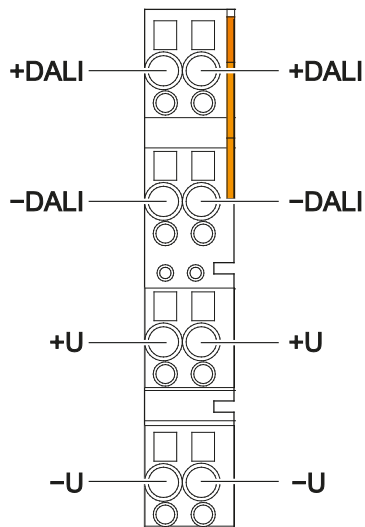


Figure 4: CAGE CLAMP® Connectors

Table 7: Legend for Figure "CAGE CLAMP® Connectors"

Designation	Connector	Function
+DALI	1	DALI Bus connection +
	5	DALI Bus connection +
-DALI	2	DALI Bus connection -
	6	DALI Bus connection -
+U	3	Supply +
	7	Supply +
-U	4	Supply -
	8	Supply -



## *Information*

### **Configuration diagram for connections!**

The power supply configuration for the I/O module and the configuration for the DALI network are shown in the figures given in the sub-sections “Power Supply Configuration for 753-620” and “Power Supply Configuration for 787-1007”. You can also refer to the main section “Installation Notes” > ... > “Module Supply.”

---



## 3.6 Display Elements

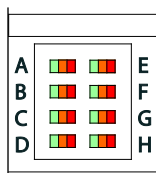


Figure 5: Display Elements

Table 8: Legend for Figure “Display Elements”

LED	Name/Function
A	<ul style="list-style-type: none"> <li>• Easy mode</li> <li>• Firmware-update</li> </ul>
B	DALI line – TxD (transmit)
C	Operational readiness (local bus communication)
D	<ul style="list-style-type: none"> <li>• 1 or 2-button operation (only in “easy mode”)</li> <li>• Interruption of the power supply of the I/O module (18 V)</li> </ul>
E	Full mode
F	DALI line – RxD (receive)
G	Power supply <ul style="list-style-type: none"> <li>• Internal</li> <li>• External</li> <li>• Error</li> </ul>
H	<ul style="list-style-type: none"> <li>• Latching relay function (only in “easy mode”)</li> <li>• Short circuit on the DALI line <sup>*)</sup></li> </ul>

<sup>\*)</sup> Short circuit detection and signaling is only possible if the DALI line is also powered via the DALI Multi-Master Module, which is powered by a WAGO power supply.

### Note



#### Diagnosis of the LED Statuses

You can find a detailed overview of the LED statuses and their meanings in the “Diagnostics” section.

## 3.7 Operating Elements

The 753-647 I/O module does not have any electro-mechanical operating elements.

Changes to the configuration and parameters are made via the higher-order control, or using the special WAGO DALI Configurator.

### 3.8 Schematic Diagram

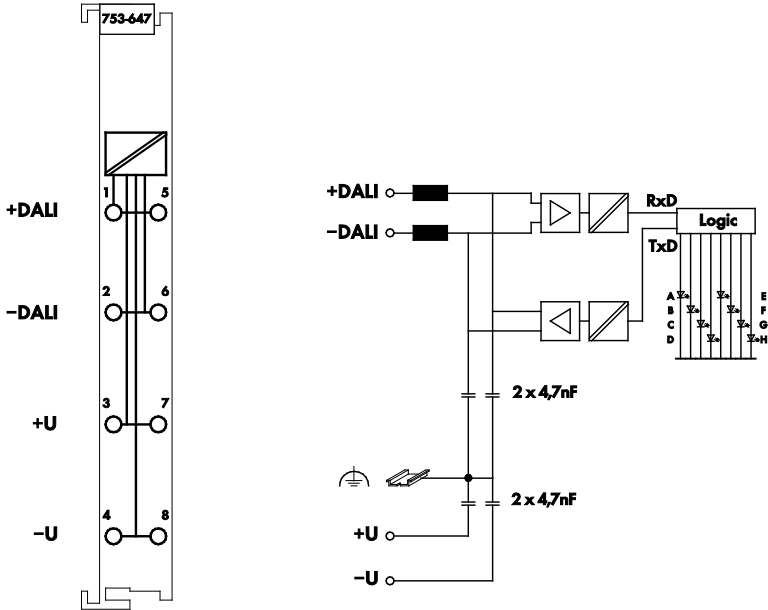


Figure 6: Schematic Diagram

## 3.9 Technical Data

### 3.9.1 Device

Table 9: Technical Data – Device

Width	12 mm
Height (from upper edge of DIN 35 rail)	64 mm
Length	100 mm
Weight	55 g

### 3.9.2 Supply

Table 10: Technical Data – Supply

Power supply	Via system voltage (+5 VDC)
Current consumption (internal)	85 mA
I/O Module power supply at +U and -U	18 V via 753-620 or 787-1007 power supplies
Guaranteed supply current (acc. to DALI specification)	200 mA
Current consumption from DALI bus with alternative supply via DALI bus	10 mA
Isolation	1500 VDC DALI bus/local bus

### 3.9.3 Communication

Table 11: Technical Data – Communication

DALI specification	DIN EN 62386
Max. number of addressable slaves (DALI addresses)	Addressable: 64 Control Devices + 64 Control Gears
Transmission channel	1
Internal bit width	24-byte data
Commissioning and parameterization	Via WAGO-I/O-CHECK, e!COCKPIT and/or via WAGO-I/O-PRO
Configuration	With WAGO DALI Configurator

### 3.9.4 Connection Type

Table 12: Technical Data – Field Wiring

Wire connection	CAGE CLAMP®
Cross section	0.08 mm² ... 2.5 mm², AWG 28 ... 14
Stripped lengths	8 mm ... 9 mm / 0.33 in

Table 13: Technical Data – Data Contacts

Data contacts	Slide contact, hard gold plated, self-cleaning
---------------	--

### 3.9.5 Climatic Environmental Conditions

Table 14: Technical Data – Climatic Environmental Conditions

Operating temperature range	0 °C ... 55 °C
Storage temperature range	-25 °C ... +85 °C
Relative humidity without condensation	Max. 95 %
Resistance to harmful substances	Acc. to IEC 60068-2-42 and IEC 60068-2-43
Maximum pollutant concentration at relative humidity < 75 %	SO <sub>2</sub> ≤ 25 ppm H <sub>2</sub> S ≤ 10 ppm
Special conditions	Ensure that additional measures for components are taken, which are used in an environment involving: <ul style="list-style-type: none"> <li>– dust, caustic vapors or gases</li> <li>– ionizing radiation</li> </ul>

## 3.10 Approvals


### Information



#### More information about approvals.

Detailed references to the approvals are listed in the document “Overview Approvals **WAGO-I/O-SYSTEM 750**”, which you can find via the internet under: [www.wago.com](http://www.wago.com) > SERVICES > DOWNLOADS > Additional documentation and information on automation products > WAGO-I/O-SYSTEM 750 > System Description.

The following approvals have been granted to 753-647 I/O modules:

 Conformity Marking

 UL508

The following approvals are pending for 753-647 I/O modules:



Korea Certification

MSIP-REM-W43-MSM750

The following Ex approvals are pending for 753-647 I/O modules:

ATEX guideline

acc. to EN 60079-0 and  
acc. to EN 60079-15

acc. to EN 61241-0 and  
acc. to EN 61241-1

The following ship approvals have been granted to 753-647 I/O modules:



DNV GL

Temperature: B (cold test with 0 °C/16 h)

Humidity: A

Vibration: B

Enclosure: A

EMC: A/B\*

(dependent on the combination of power supply filter and DC/DC converter – see section “Power Supply for Use in the Maritime Sector”)

---

**Note****Applicable from SW 01 / HW 02!**

This ship approval is only applicable from SW 01 / HW 02!

---

### 3.11 Standards and Guidelines

753-647 I/O modules meet the following requirements on emission and immunity of interference:

EMC CE-Immunity to interference      EN 61000-6-2

EMC CE-Emission of interference      EN 61000-6-3

---

**Note****EMC CE Immunity to interference and transmission provided only in conjunction with the 753-620 or 787-1007 power supply unit!**

Compliance with the indicated EMC standards for CE immunity to interference and transmission can only be reliably maintained when power to the DALI Multi-Master module is provided via the 753-620 or 787-1007 power supply units!

---

EMC marine applications-Immunity  
to interference      acc. to DNV GLEMC marine applications-Emission  
of interference      acc. to DNV GL

## 4 Process Image

The DALI Multi-Master Module always has a 24-byte process image.

This enables the I/O module to be addressed and configured either via a dedicated IEC application, or using the WAGO DALI Configurator.

If the WAGO DALI Configurator is used, the DALI Multi-Master Module is operated in the “Full mode”, as a special DALI master module is employed. The DALI master module switches the DALI Multi-Master Module to this operating mode.

There is no difference between the “Full mode” and “Easy mode” when representing the I/O modules in the process images for the fieldbuses and software tools (except for the control configuration in *WAGO-I/O-PRO*).

The “Easy mode” is the set default. This mode must also be used if no program is being used that has a DALI master module.

The mode setting is not permanently stored in the DALI-Multi-Master Module, meaning it always reverts to the “Easy mode” when the module is reset.

### 4.1 Watchdog

The DALI Multi-Master Module can be configured in such a way that the communication with a higher-level controller and the local bus communication can be monitored by a watchdog. The watchdog is disabled in the factory settings. If the watchdog detects a loss of communication, the DALI Multi-Master Module briefly switches the DALI bus off and back on in order to trigger the “System Failure Level” (SFL) of the DALI operating devices

---

#### Note



##### **No monitoring function with external power supply**

This functionality only exists if the DALI Multi-Master Module powers the DALI bus. If power is supplied by an external DALI power supply unit, the DALI bus cannot be switched off in order to trigger the SFL.

In “easy mode,” the watchdog must be toggled actively via the process image. Bit 4 in byte 0 is available for this purpose. If no toggling occurs beyond the watchdog time corresponding to the setting, the SFL is triggered.

No active toggling is necessary in “full mode,” since a regular status query is made via the mailbox.

The communication monitoring can be parameterized via the DALI Configurator or with the help of macro 24. The time for the watchdog can be set in register 47. The setting range is from 1 to 255 minutes. The watchdog can be enabled/disabled with the WAGO DALI Configurator starting from Version 3.18.0.1180.

## 4.2 Dedicated IEC Application

In principle, the DALI Multi-Master Module can directly access the ECGs, groups and scenes in the “Easy mode” without any further configuration of the module being necessary (as long as the DALI network has already been addressed).

The WAGO-I/O-PRO library “DALI\_647\_xx.lib” can be integrated into the application for programming of a dedicated IEC application. This library contains the special DALI master module for processing the data that switches the DALI Multi-Master Module to the “Full mode”.

The DALI Multi-Master Module is operated in the “Full mode” for this for creating own programs with the DALI master module.



### Note

#### **Download the WAGO-I/O-PRO library free of charge!**

To use and create your own IEC application, you can download the current version of the WAGO-I/O-PRO “DALI\_647\_xx.lib” or “DALI\_647\_SpecialSensor\_xx.lib” library at no cost from the WAGO website at: [www.wago.com](http://www.wago.com)

## 4.3 Full Mode

In the “Full mode”, the 24 bytes for the process image is used (as for other complex WAGO I/O modules, such as KNX, MP bus, etc.) for tunneling of a protocol via a mailbox interface.

In the “Full mode” the process image for the DALI Multi-Master Module consists of the following 24 bytes: 1 byte for Control/Status and 23 bytes for acyclic data.

The advantage for the user is that no further programming is required to easily perform all settings and data evaluation via the WAGO DALI Configurator user interface.

The I/O module can query and control the status of the interconnected devices in the DALI line by systematic polling. Systematic polling can also be configured to enable polling of the active devices to be conducted more rapidly per cycle than the inactive devices.

Some selected settings for the electronic control gear (such as status information for the ECGs) are stored in a permanently updated, internal database of the module when configured. The operating hours of the devices (active times of the lights) are also recorded.

When a defective electronic ballast (ECG) must be replaced, the replacement ECG can be reconfigured automatically using the “Auto Replace” function.





## Note

### **Restart of the I/O module necessary!**

If an existing DALI line is changed, i.e. one or more ECGs are added or removed, the DALI Multi-Master Module must be restarted. This restart maintains the “auto replace” function.

## 4.4 Easy Mode

The “Easy mode” can be run as an alternative when no DALI master module is used. The “Easy mode” provides lighting control using simple binary signals, without complicated PLC programming.

In the “Easy mode”, changes to individual bits of the process image are converted directly into DALI commands for a pre-configured DALI network.

23 bytes of the 24-byte process image can be used directly for switching of ECGs, groups or scenes in the “Easy mode”.

The structure of the process data is described in detail in the following tables.

Depending on the switching action, short or long, either “ON/OFF” or “Dim brighter/darker” is entered in the output process map. “ON/OFF” switching is implemented via the “Latching relay” function, while “Dim brighter/darker” is realized via the “Dim in 1- and 2-button mode” function. These functions are described briefly in the directly ensuing sections.

### 4.4.1 Latching Relay Function

Each time a button is pressed for a latching relay an electrical pulse is transmitted to the latching relay and alters the circuit state. This status is stored until a new pulse results in a further status change.

The WAGO DALI Configurator is used to switch to the latching relay mode.

### 4.4.2 Dim in 1- and 2-Button Mode

A short press of the button in one-button mode switches the lighting on or off. A long button press (longer than 500 ms) increases or decreases the lighting intensity.

Dimming in the two-button mode functions similarly, except that in this case one button is used to switch on and increase the intensity of the lighting and a second one for dimming and switching off of the lighting:

- If the lighting is off, the “ON” rocker switch is used to switch on the lighting and slowly increase the lighting intensity.
- The “OFF” rocker switch is used to dim the lighting.  
When the minimum dimming level is reached, the lighting is switched off.

Table 15: Lighting Control via Buttons

Button	Press	Description
"ON" rocker switch	Short	Switch lighting on.
	Long	Increase light intensity (brighter).
"OFF" rocker switch	Short	Switch lighting off.
	Long	Dim lighting (darker).

The WAGO DALI Configurator is used to switch between one-button and two-button operation.

#### 4.4.3 Process Image Overview in the "Easy Mode"

Table 16: Overview of the Output Process Image in the "Easy Mode"

Byte	0	1	2 ... 17	18 ... 21	22 ... 23
Output process image	Switch broadcast; broadcast increase/decrease lighting intensity; toggle watchdog	0	Switch short addresses, increase/decrease lighting intensity	Switch group addresses; increase/decrease lighting intensity	Call up scene

Table 17: Overview of Input Process Image in the "Easy Mode"

Byte	0	1	2 ... 17	18 ... 21	22 ... 23
Input process image	Status Activate Broadcast	(Reserved)	Status, Activate short addresses	Status Activate group addresses	(Not in use)

## 4.4.4 Activating/De-activating 64 DALI Actuators, Dimming

Table 18: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 0 und 1

Byte.Bit	Broad- cast/ Watchdog	Output Process Image	Input Process Image
0.0	Broad- casts	Broadcast ON	1-/2-button mode
0.1		Broadcast OFF	-
0.2		Broadcast ON/OFF dimming	Broadcast: Status ON/OFF
0.3		Broadcast short ON/OFF	-
0.4	Watchdog	Toggle watchdog	-
0.5	-	(Reserved)	-
0.6		(Reserved)	-
0.7		(Reserved)	-
1.0...1.7		(Reserved)	(Reserved)

Table 19: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 18 ... 21

Byte.Bit	DALI Addr. (DA)	Output Process Image		Input Process Image
		1-Button Mode	2-Button Mode	
1.0	DA0	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
1.1			Short: OFF Long: Darker dimming	Status: No error / Error
1.2	DA1	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
1.3			Short: OFF Long: Darker dimming	Status: No error / Error
1.4	DA2	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
1.5			Short: OFF Long: Darker dimming	Status: No error / Error
1.6	DA3	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
1.7			Short: OFF Long: Darker dimming	Status: No error / Error
2.0	DA4	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
2.1			Short: OFF Long: Darker dimming	Status: No error / Error
2.2	DA5	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
2.3			Short: OFF Long: Darker dimming	Status: No error / Error
...				
17.4	DA62	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
17.5			Short: OFF Long: Darker dimming	Status: No error / Error
17.6	DA63	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
17.7			Short: OFF Long: Darker dimming	Status: No error / Error

### 4.4.5 Activating/De-activating 16 Groups, Dimming

Table 20: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 18 ... 21

Byte.Bit	Group Addr. (GA)	Output Process Image		Input Process Image
		1-Button Mode	2-Button Mode	
18.0	GA0	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
18.1			Short: OFF Long: Darker dimming	Status: No error / Error
18.2	GA1	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
18.3			Short: OFF Long: Darker dimming	Status: No error / Error
18.4	GA2	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
18.5			Short: OFF Long: Darker dimming	Status: No error / Error
18.6	GA3	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
18.7			Short: OFF Long: Darker dimming	Status: No error / Error
19.0	GA4	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
19.1			Short: OFF Long: Darker dimming	Status: No error / Error
19.2	GA5	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
19.3			Short: OFF Long: Darker dimming	Status: No error / Error
...				
21.4	GA14	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
21.5			Short: OFF Long: Darker dimming	Status: No error / Error
21.6	GA15	Short: ON/OFF Long: Brighter/Darker dimming	Short: ON Long: Brighter dimming	Status: ON/OFF
21.7			Short: OFF Long: Darker dimming	Status: No error / Error

## 4.4.6 Activating/De-activating 16 Scenes

Table 21: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 22 and 23

Byte.Bit	Scene	Output Process Image	Input Process Image
22.0	0	Switch to scene 0.	-
22.1	1	Switch to scene 1.	-
22.2	2	Switch to scene 2.	-
22.3	3	Switch to scene 3.	-
22.4	4	Switch to scene 4.	-
22.5	5	Switch to scene 5.	-
22.6	6	Switch to scene 6.	-
22.7	7	Switch to scene 7.	-
23.0	8	Switch to scene 8.	-
23.1	9	Switch to scene 9.	-
23.2	10	Switch to scene 10.	-
23.3	11	Switch to scene 11.	-
23.4	12	Switch to scene 12.	-
23.5	13	Switch to scene 13.	-
23.6	14	Switch to scene 14.	-
23.7	15	Switch to scene 15.	-

## 5 Mounting

### 5.1 Mounting Sequence

Fieldbus couplers/controllers and I/O modules of the WAGO-I/O-SYSTEM 750 are snapped directly on a carrier rail in accordance with the European standard EN 50022 (DIN 35).

The reliable positioning and connection is made using a tongue and groove system. Due to the automatic locking, the individual devices are securely seated on the rail after installation.

Starting with the fieldbus coupler/controller, the I/O modules are mounted adjacent to each other according to the project design. Errors in the design of the node in terms of the potential groups (connection via the power contacts) are recognized, as the I/O modules with power contacts (blade contacts) cannot be linked to I/O modules with fewer power contacts.

#### CAUTION

##### **Risk of injury due to sharp-edged blade contacts!**

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

#### NOTICE

##### **Insert I/O modules only from the proper direction!**

All I/O modules feature grooves for power jumper contacts on the right side. For some I/O modules, the grooves are closed on the top. Therefore, I/O modules featuring a power jumper contact on the left side cannot be snapped from the top. This mechanical coding helps to avoid configuration errors, which may destroy the I/O modules. Therefore, insert I/O modules only from the right and from the top.

#### Note



##### **Don't forget the bus end module!**

Always plug a bus end module (750-600) onto the end of the fieldbus node! You must always use a bus end module at all fieldbus nodes with WAGO-I/O-SYSTEM 750 fieldbus couplers/controllers to guarantee proper data transfer.

## 5.2 Inserting and Removing Devices

### NOTICE

**Perform work on devices only if they are de-energized!**

Working on energized devices can damage them. Therefore, turn off the power supply before working on the devices.

### 5.2.1 Inserting the I/O Module

1. Position the I/O module so that the tongue and groove joints to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are engaged.



Figure 7: Insert I/O Module (Example)

2. Press the I/O module into the assembly until the I/O module snaps into the carrier rail.

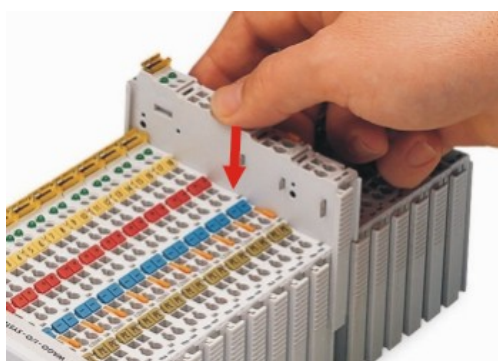


Figure 8: Snap the I/O Module into Place (Example)

With the I/O module snapped in place, the electrical connections for the data contacts and power jumper contacts (if any) to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are established.

## 5.2.2 Removing the I/O Module

**Note****Remove pluggable wiring!**

Before removing a 753 Series I/O Module from the node, you must first remove the plug (pluggable wiring) from the I/O module (see section “Plug Removal”)!

1. Remove the I/O module from the node by pulling the tab.

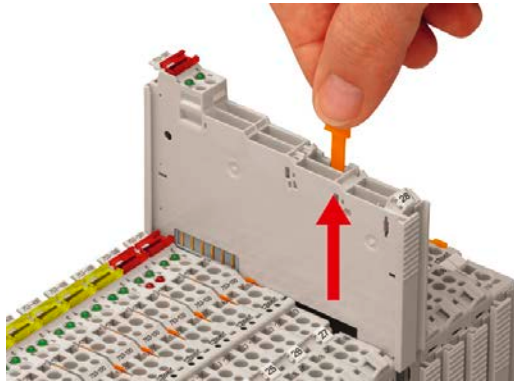


Figure 9: Removing the I/O Module (Example)

Electrical connections for data or power jumper contacts are disconnected when removing the I/O module.



## 5.3 I/O Modules with Pluggable Wiring Level (Series 753)

For wiring, a plug is plugged into the bottom of the module of all 753 Series I/O modules. The plug can be completely removed together with the wiring, simplifying replacement of defective modules from the assembly.

### Note



**Plugs and coding fingers are not included in the scope of supply!**  
Plugs of the 753 Series and coding fingers are not included in the scope of supplied items and may be ordered as accessory items!

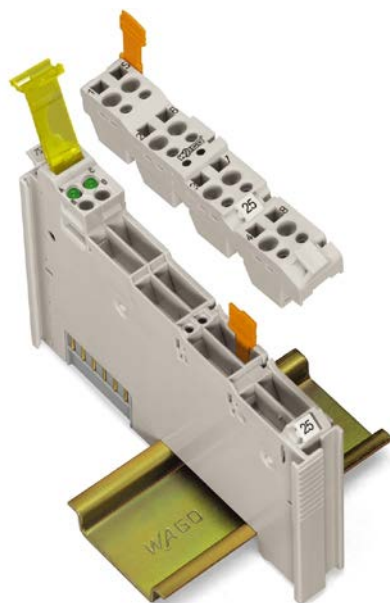


Figure 10: Plug and I/O Module

Miniature WSB marking tags ensure that the right plug is matched up with the right I/O module (see figure below).

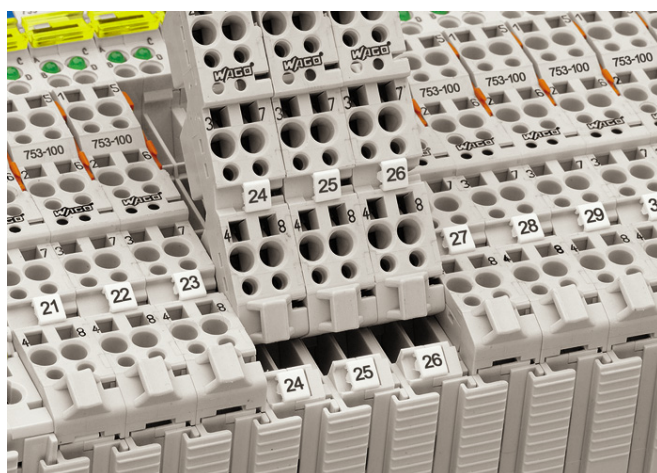


Figure 11: Assignment of I/O Module to Plug Using Mini-WSB Tags

This plug provides an option for attaching cable binders.

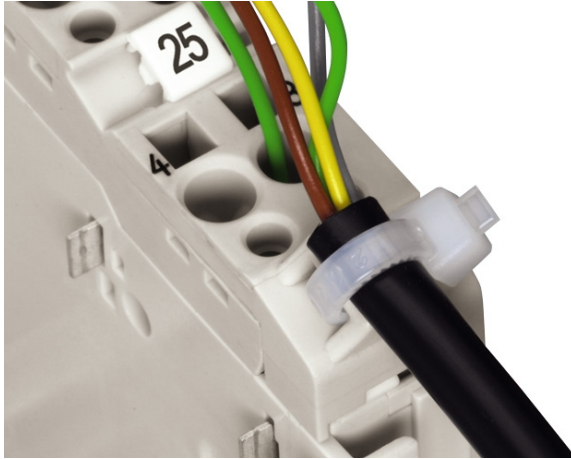


Figure 12: Attachment of Cable Binders

### 5.3.1 Coding

Coding using small plastic pins and sockets facilitates mating of the I/O module with the appropriate plug.

1. Insert the pin into the socket.



Figure 13: Assembling the Coding Fingers

2. Position the assembled coding fingers in the I/O module. Due to its design, each coding finger allows 4 different coding options (i.e.; 16 different options using 2 coding fingers).

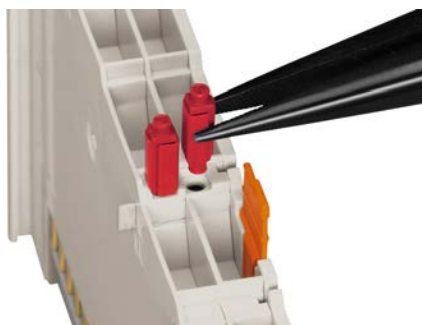


Figure 14: Inserting the Coding Fingers

3. Place the plug onto the I/O module.



Figure 15: Plugging the Plug into Place

4. When the plug is removed the sockets remain in the I/O module. The coded plug can only fit in the corresponding coded I/O module (see figures below).



Figure 16: "Sure Match" Coding Fingers

### 5.3.2 Plug Removal

1. Remove the plug from the I/O module by pulling the orange pull tab on the plug toward the top of the I/O module.

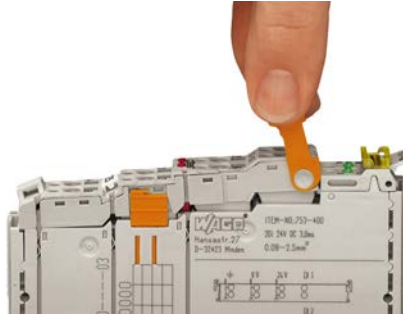


Figure 17: Pulling the Pull Tab

The plug detaches from the I/O module.

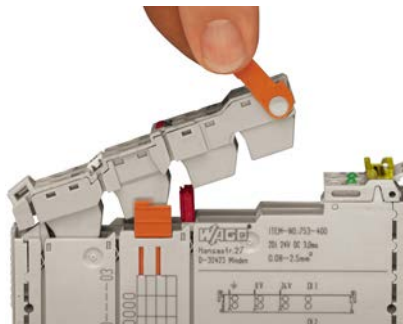


Figure 18: Removing the Plug Without Tools

2. Alternatively, you can also use a standard screwdriver at the position shown (in the figure below) to remove the plug.

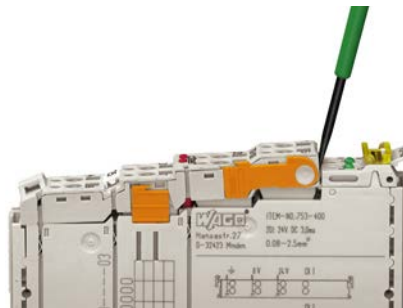


Figure 19: Removing the Plug Using a Screwdriver

## 6 Connect Devices

### 6.1 Connecting a Conductor to the CAGE CLAMP®

The WAGO CAGE CLAMP® connection is appropriate for solid, stranded and finely stranded conductors.

#### Note



**Only connect one conductor to each CAGE CLAMP®!**

Only one conductor may be connected to each CAGE CLAMP®.

Do not connect more than one conductor at one single connection!

If more than one conductor must be routed to one connection, these must be connected in an up-circuit wiring assembly, for example using WAGO feed-through terminals.

1. For opening the CAGE CLAMP® insert the actuating tool into the opening above the connection.
2. Insert the conductor into the corresponding connection opening.
3. For closing the CAGE CLAMP® simply remove the tool. The conductor is now clamped firmly in place.

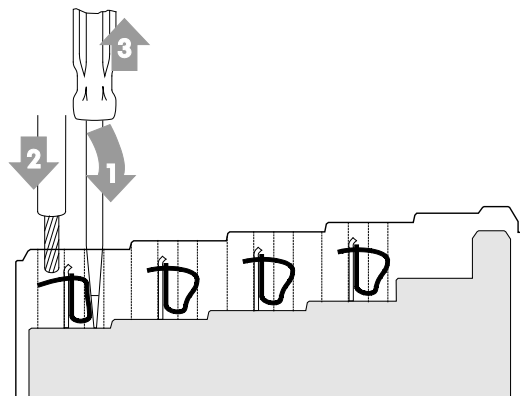


Figure 20: Connecting a Conductor to a CAGE CLAMP®

## 6.2 Power Supply for Marine Applications

### WARNING

**Use a separate power supply when operating the module in marine applications!**

Power supply to the supply module DALI Multi-Master DC/DC Converter (753-620) must be provided via the appropriate filter module when using DALI Multi-Master Module (753-647) in marine applications! See table “Combination Filter Module and DC/DC Converter”.

The external power supply (787-1007) can also be used for the EMC2 application area. A filter module is still necessary when using the entire node in marine applications.

For the exact arrangement of the filter module and DC/DC Converter in the system configuration, please refer to the tables “Legend for the Figure”, “Power Supply Concept, Category EMC1 and EMC2 (Marine Applications)” and “Combination Filter Module and DC/DC Converter”, as well as the figure “Power Supply Concept, Category EMC1 and EMC2 (Marine Applications)”.

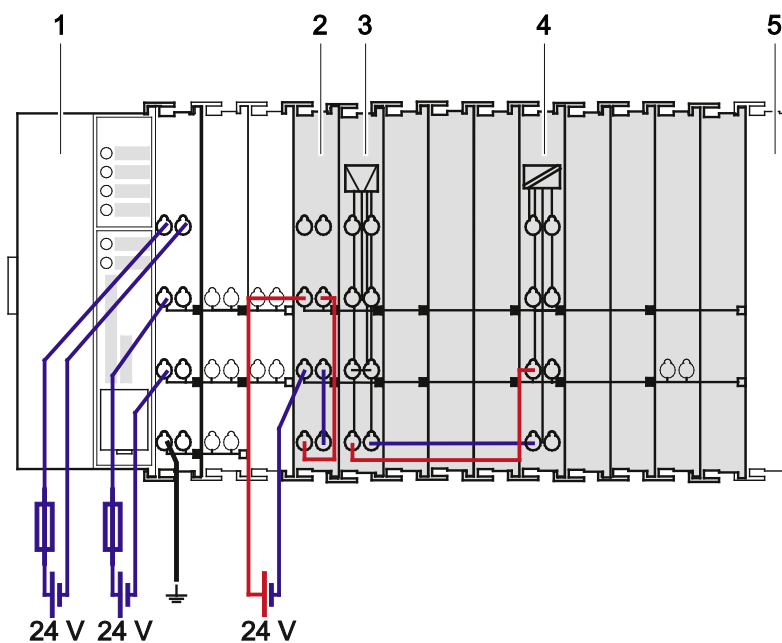


Figure 21: Power Supply Concept, Category EMC1 and EMC2 (Marine Applications)

Table 22: Legend for the Figure “Power Supply Concept, Category EMC1 and EMC2 (Marine Applications)”

No.	Explanation
1	Fieldbus coupler/controller
2	Filter module <sup>*)</sup>
3	DALI Multi-Master DC/DC Converter (753-620) <sup>*)</sup>
4	DALI Multi-Master Module (753-647)
5	End module

<sup>\*)</sup> Combination, see table “Combination Filter Module and DC/DC Converter”

Table 23: Combination Filter Module and DC/DC Converter

<b>Category</b>	<b>Filter Module (No. 2)</b>	<b>DALI Multi-Master DC/DC Converter (No. 3)</b>
<b>Class B</b>	750-626	753-620
<b>Class B</b>	750-624 750-624/000-001	753-620
<b>Class A</b>	750-624/020-000 750-624/020-001	753-620
<b>Class A</b>	750-626/020-000 750-626/020-001	753-620
<b>Class A</b>	External power supply (787-1007)	

## 6.3 Installation Notes



### DANGER

#### Deenergize all lights on the network!

When operating several lighting groups in different circuits, there is a risk that line voltage can transfer to other lighting groups via the DALI data line in the event of error. Therefore, generally deenergize all lighting circuits on your network when working on data lines.

### NOTICE

#### Only perform work on the components when the system is de-energized!

Working on the devices when the system is energized can damage the devices. Therefore, turn off the power supply before working on the devices.

### Note



#### Observe IEC 62386!

Always observe the validity of IEC 62386!

The information given below on setting up a DALI network should be seen as recommendations only.

### 6.3.1 Module Assembly

### Note



#### Supply module is required!

The DALI Multi-Master Module has no power jumper contacts. The field supply potential of the adjacent I/O modules in the node will not be passed to the following modules. A supply module is therefore required to provide any additional I/O modules.

### 6.3.2 Module Supply

### Note



**Required accessories: DALI Multi-Master DC/DC Converter, Item No.: 753-620 or power supply unit for DALI Multi-Master Module, Item No.: 787-1007!**

A suitable DALI power supply unit is required for the 18 V power supply to the DALI network via the DALI Multi-Master Module which is compliant with the DALI guideline, such as the DALI Multi-Master DC/DC Converter, Item No. 753-620, or the power supply unit with the Item No. 787-1007.

These items provide for reliable electrical isolation between the DALI bus and the local bus that is required for installation of 230 V electrical loads.



## NOTICE

### **Destruction of DALI subscribers due to misuse of the WAGO power supply (787-1007)!**

Please note that the WAGO power supply (item no.: 787 1007) must only be connected to the DALI Multi-Master Module (753-647). Power for the DALI bus is supplied indirectly via the DALI Multi-Master Module.

A direction connect to the DALI bus can result in the destruction of the attached DALI subscribers. Therefore, never connect the WAGO power supply (787-1007) to a DALI network directly without a DALI Multi-Master Module connected between the power supply and the network

## Note



### **EMC regulations comply by DIN rail grounding!**

In order to meet the EMC regulations, the DC/DC converter must be connected to ground using the appropriate FE-connection on the rail.

The length of power supply cable between DALI Multi-Master DC/DC Converter (753-620) and DALI Multi-Master Module (753-647) may be 1 m maximum. The power supply cable must also be shielded when used in marine applications.

### 6.3.2.1 Power Supply Configuration for 753-620

If you use a DALI Multi-Master DC/DC Converter (753-620) for power supply, exactly 1 DALI Multi-Master Module can be supplied with power.

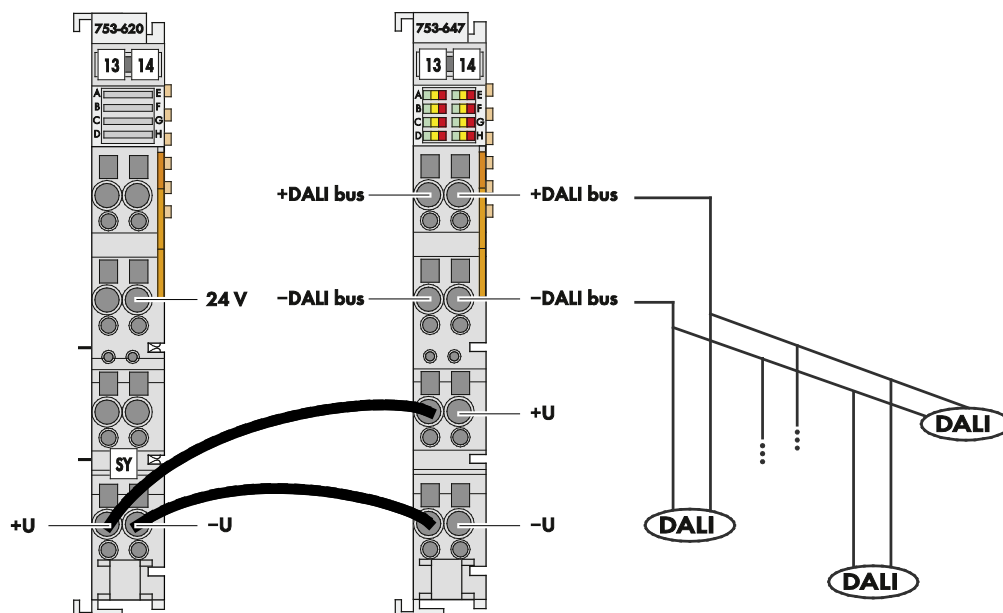


Figure 22: Configuration Diagram for the DALI Multi-Master DC/DC Converter (753-620) with 1 DALI Multi-Master Module

Ensure that the DALI Multi-Master DC/DC Converters are initially installed adjacently in groups, as they pass on potential via power jumper contacts. Each of the DALI Multi-Master Modules are then wired individually to the power supply terminals (see figure below).

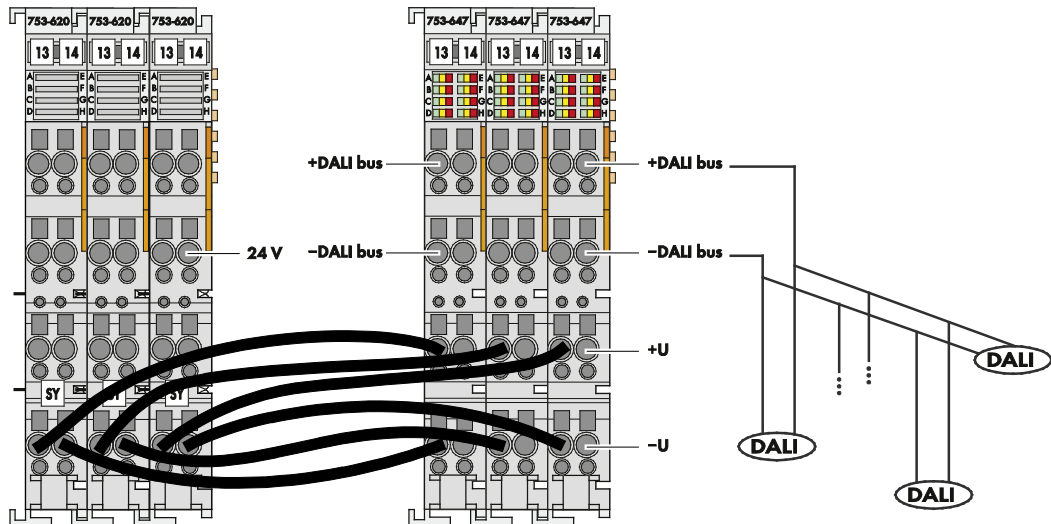


Figure 23: Configuration Diagram for 3 DALI Multi-Master DC/DC Converters (753-620) with 3 DALI Multi-Master Modules

### 6.3.2.2 Power Supply Configuration for 787-1007

If a power supply unit (787-1007) is used, it can supply power to multiple DALI Multi-Master Modules (753-647). With total power consumption of 200 mA per DALI line, up to five DALI Multi-Master Modules (753-647) can be powered with a 787-1007 power supply unit.

## Note



### 230 V power supply required!

Note that the 787-1007 power supply unit requires 230 V power supply.

Connection of power supply is made at the first DALI Multi-Master Module. Power must be passed on via cable bridges for supply of the other I/O modules.

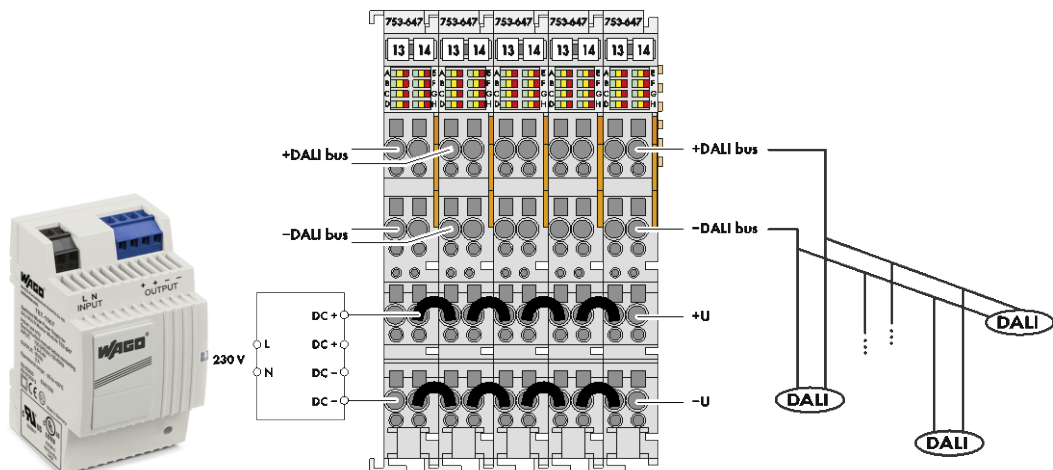


Figure 24: Configuration Diagram for a 787-1007 Power Supply with 5 DALI Multi-Master Modules

### 6.3.3 DALI Bus Line

The DALI bus control line consists of one pair of conductors which can be run together with the 230 V installation.

For example, a 5-conductor cable can be used combining both the voltage supply and the DALI control line.

The minimum cross section of the conductors depends on the cable length.

Table 24: Conductor Cross Section Depending on the Cable Length

Cable Length	Conductor Cross Section (Min.)
< 100 m	0.5 mm <sup>2</sup>
100 m ... 150 m	0.75 mm <sup>2</sup>
> 150 m	1.5 mm <sup>2</sup>

#### Note



#### Maximum cable length 300 m!

The maximum voltage drop of the DALI line should not exceed 2 V. Therefore, the maximum cable length between the more distant components is depending on the conductor cross-section limited to 300 m.

### 6.3.4 DALI Bus Topology

A DALI Master can control a line with a maximum of 64 slaves consuming 2 mA each. 16 separate groups and 16 separate scenes can be allocated to each slave.

Additionally, up to 64 addresses for DALI sensors can be used. The actual possible number of sensors is determined by the following factors:

- Number of addresses per multi-sensor
- Power consumption of the sensor
- Bus performance

For use with the DALI Multi-Master Module 753-647 are recommended max. 16 multi-sensors per module.

The topology of the DALI bus is not defined. Line, tree, star or mixed structures are possible. However, ring structures should be avoided.

The same installation regulations apply for both lighting equipments and power supply cables.

This also applies to the installation of special rooms ("harmonized installation regulations").

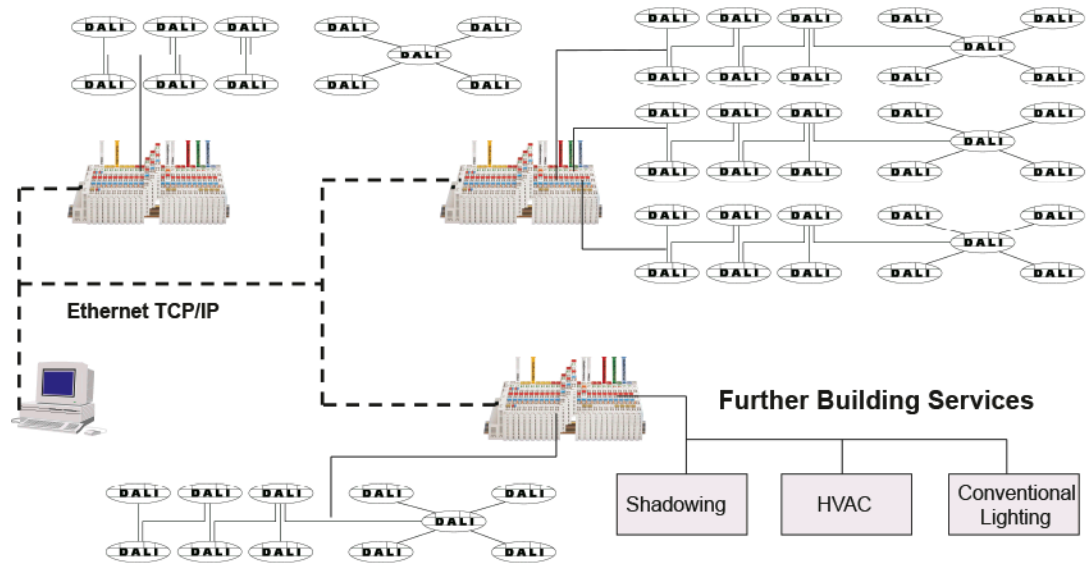


Figure 25: Example of DALI Topology

## Note



### Two I/O modules (753-647) in one line

For operation with two DALI Multi-Master Modules (753-647) in one DALI line, the “Network Query after Switch-on” parameter must be disabled for one of the two 753-647. The same applies to the “Enable Internal Power Supply” parameter. You disable these with the WAGO DALI Configurator by unchecking the box next to the respective parameter.

To avoid collisions of the data packets, you should also set the “operating device query interval [s]” differently for the two DALI Multi-Master Modules (753-647) when cyclic operating device querying is enabled.

## 7 Commissioning

### 7.1 Preparation

A prerequisite for the commissioning example described below is that you have correctly installed and set up the hardware for your fieldbus node and the DALI network and that these items all function properly.

Either the DALI Multi-Master DC/DC Converter (753-620) or the external power supply unit (787-1007) can be used for power supply for the DALI Multi-Master Module at the fieldbus node. Connection of the power supply is made as explained in the installation instructions (see section "Installation Notes").

In the example given here, the fieldbus node consists of the following WAGO-I/O-SYSTEM components:

Table 25: Example of a Fieldbus Node Setup

Item Number	Designation
750-881	Programmable Fieldbus Controller ETHERNET (PLC)
753-620	DALI Multi-Master DC/DC Converter
753-647	DALI Multi-Master Module
750-600	End module

- The DALI bus has been connected to the +/-DALI connectors of the DALI Multi-Master Module and has at least one DALI ECG as a bus slave.
- The PC is linked to the fieldbus node via an RJ-45 network cable. The PC's network card must be set based on the address range for the fieldbus node.

As an alternative, connection can also be made via the fieldbus controller serial interface. Use the WAGO communication cable to set up a physical connection via the serial service port. This cable is supplied with the WAGO-I/O-PRO (Item No.: 759-333) programming software, or can be obtained as an accessory under Item No.: 750-920.

Open the WAGO DALI Configurator to start up the DALI Multi-Master Module and then configure the DALI network linked to the module.

### Information



#### WAGO DALI Configurator

You can download the WAGO DALI Configurator as a stand-alone tool from the WAGO Internet site: [www.wago.com](http://www.wago.com).



## Information

### Additional information

More information on commissioning is available on the WAGO website at:

[www.wago.com](http://www.wago.com)

## 7.2 Accessing the DALI Multi-Master Module

You can access the DALI Multi-Master Module (753-647) from the WAGO DALI Configurator.

A communication link must be set up via the IP address of the WAGO PLC connected at the fieldbus node to ensure proper data exchange with the DALI Multi-Master Module via the WAGO DALI Configurator. To set up the link, click the **[Settings]** button on the ribbon of the WAGO DALI Configurator directly.

## 7.3 Module Configuration Notes

In the WAGO DALI Configurator view for module configuration, you can perform general settings for the DALI Multi-Master Module (753-647).

You can access this configuration area on the “MODULE SETTINGS” tab.

On this tab, you can define specific settings for the “Easy” and “Full” modes, as well as general settings such as the network query after switching on, cyclic gear polling and behavior in the case of faulty telegrams. You can also disable the internal DALI network power supply in the DALI Multi-Master Module to connect an external DALI network power supply (**Enable Internal Power Supply** checkbox).

You can read the settings of the DALI Multi-Master Module by clicking the **[Read]** button on the ribbon and write the settings made to the DALI Multi-Master Module by clicking the **[Write]** button.

## 7.4 “Construction Site Function” for Initial Startup

The so-called “Construction Site Function” is helpful when configuring the module for the initial startup.

Under the “MODULE SETTINGS” tab in the WAGO DALI Configurator, the “Central OFF” function in the “**Behavior after Short Circuit**” selection box is used for this purpose. If this function is enabled, you can short circuit the DALI bus by switching a button between the two DALI bus lines.

If the short circuit then happens within 5 seconds (tolerance 3 ... 7 seconds), the “OFF” command is sent as a broadcast and all ECGs and lighting are switched OFF simultaneously.

---

As long as the “System Failure Level” parameter value is greater than zero (default value = 100 %), a short circuit outside the time window of 3 ... 7 seconds causes the lighting to switch ON.

## 7.5 Data Management Notes

If online access to the devices on the bus is not possible, you can define virtual DALI devices as an initial step and match these to the actual installation online at a later time. Offline configuration of the entire DALI network, including control gear and sensors, can be performed in a limited scope using the WAGO DALI Configurator. Device configurations can also be saved and restored, enabling a replaced device to be reconstructed using the values valid in the database. This enables you to copy device settings to a different device or to several ones.

## 7.6 Configuration of the DALI Network Using the WAGO DALI Configurator

The following steps are to be performed to configure the DALI Multi-Master Module and the DALI network linked with the module using the WAGO DALI Configurator:

1. Define addresses for the DALI devices
2. Configure DALI devices
3. Define DALI groups and scenes
4. Perform diagnosis

---

### *Information*



#### **More information about configuration using the WAGO DALI Configurator!**

A detailed description of the software and the individual configuration steps using the WAGO DALI Configurator is given in the corresponding manual.

You can download the WAGO DALI Configurator manual from the WAGO Internet site at: [www.wago.com](http://www.wago.com).

---

## 8 Diagnostics

Color-coded LEDs A ... H provide information about different statuses in the operation of the I/O module.

### 8.1 LED “A” Status Diagnosis

LED “A” provides information about statuses of the I/O module when it is operated in “easy mode”:

Table 26: LED “A” Status Diagnosis

Status	Explanation	Additional Information
Green	Easy mode is operating.	The I/O module is set to “easy mode” by default and also always returns to “easy mode” after a reset.
Green flashing	Easy mode being initialized.	
		A firmware update is being performed.
Green-yellow flashing	<u>No</u> addressed devices were found; the configuration from the internal database could <u>not</u> be read.	As a result, the I/O module does not have a current configuration, and the function may therefore be limited.
Yellow	Addressed devices were found; no current configuration was read.	
Yellow flashing	<u>No</u> addressed ECGs were found; a current configuration is being read.	Sensors do not count as “addressed ECGs.” However, if the DALI line only contains sensors but no ECGs, the LED will flash yellow.
Yellow-red flashing	A firmware update is being initialized.	

### 8.2 LED “B” Status Diagnosis

Led “B” provides information about TxD signal transmission (send):

Table 27: LED “B” Status Diagnosis

Status	Explanation	Additional Information
Off	No signal transmission present	No TxD signal transmission present
Green flashing	Transmission OK	Error-free TxD signal transmission (sending)
Yellow flashing	Transmission not OK	Telegrams could not be transmitted.



## 8.3 LED “C” Status Diagnosis

LED “C” provides information about the status of the local bus communication:

Table 28: LED “C” Status Diagnosis

Status	Explanation	Additional Information
Green	Uninterrupted local bus communication	
Red	Local bus communication absent or interrupted	

## 8.4 LED “D” Status Diagnosis

LED “D” provides information about

- which button mode is enabled
- whether a firmware update is currently being initialized/performed
- whether there is an interruption in the 18 V power supply of the I/O module:

Table 29: LED “D” Status Diagnosis

Status	Explanation	Additional Information
Off	1-button mode is enabled.	Only in “easy mode”; the WAGO DALI Configurator is used to switch between 1-button and 2-button mode – see also section “Dimming Function in One- and Two-button Mode.”
Green	2-button mode is enabled.	
Red	The 18 V power supply of the I/O module is interrupted.	The internal power supply is enabled, i.e. the “Enable Internal Power Supply” box is checked (see also section “Module Configuration Notes”), but the 18 V I/O module is not present.

## 8.5 LED “E” Status Diagnosis

LED “E” provides information about statuses of the I/O module when it is operated in “full mode”:

Table 30: LED “E” Status Diagnosis

Status	Explanation	Additional Information
Green	Full mode is operating.	“Full mode” can be switched on via PLC modules.
Green flashing	Full mode is being initialized.	
Yellow	No addressed devices were found, and the configuration could <u>not</u> be read from the internal database.	As a result, the I/O module does not have a current configuration; the function may therefore be limited.
Yellow flashing	<u>No</u> addressed ECGs are found.	Sensors do not count as “addressed ECGs.” However, if the DALI line only contains sensors but no ECGs, the LED will flash yellow.

## 8.6 LED “F” Status Diagnosis

Led “F” provides information about RxD signal transmission (receive):

Table 31: LED “F” Status Diagnosis

Status	Explanation	Additional Information
Off	No signal transmission present	No RxD signal transmission
Green flashing	Receipt OK	Receipt of the RxD signals is error-free.
Yellow flashing	Receipt not OK (faulty signal transmission)	Signal transmission occurs, but frames may be incorrect upon receipt of the RxD signals.

## 8.7 LED “G” Status Diagnosis

LED “G” provides information about whether the power supply of the DALI line and I/O module is present and whether it is provided

- via a WAGO power supply<sup>\*)</sup> of the I/O module or
- via an external power supply (third-party product):

Table 32: LED “G” Status Diagnosis

Status	Explanation	Additional Information
Green	The DALI line is powered by internal voltage, i.e. by a WAGO power supply via the I/O module.	The I/O module is powered correctly, and voltage is present on the DALI line.
Yellow	The DALI line is powered by external voltage.	The I/O module is supplied with 18 V; the internal power supply is <u>not</u> enabled, i.e. the “Enable Internal Power Supply” box is unchecked (see also section “Module Configuration Notes”).
Red	No power supply is present on the DALI line.	The DALI power supply is not connected, or there is a short circuit on the DALI line. Observe LED “H” as well.

<sup>\*)</sup> See section “I/O Module Power Supply”

## 8.8 LED “H” Status Diagnosis

LED “H” provides information about

- whether the latching relay function is enabled,
- where there is a short circuit of the DALI power supply:

Table 33: LED “H” Status Diagnosis

Status	Explanation	Additional Information
Off	Latching relay function is switched off.	Only in “easy mode.” The WAGO DALI Configurator is used to switch to the latching relay mode; see section “Latching Relay Function.”
Green	Latching relay function is switched on.	
Red	There is a short circuit on the DALI line.	The 18 V power supply of the I/O module is present, the internal power supply is enabled and the DALI voltage is not present.

### Note



#### Short circuit detection only with WAGO power supply

A short circuit on the DALI line is only detected if the 18 V power is supplied via a WAGO power supply (item no.: 787-1007 or item no. 753-620).

For this purpose, the “Enable Internal Power Supply” box must be checked (see section “Module Configuration Notes”).

If an external DALI power supply is used, it is not possible to distinguish between “short circuit” and “voltage not present.”

## 9 Use in Hazardous Environments

The **WAGO-I/O-SYSTEM 750** (electrical equipment) is designed for use in Zone 2 hazardous areas.

The following sections include both the general identification of components (devices) and the installation regulations to be observed. The individual subsections of the “Installation Regulations” section must be taken into account if the I/O module has the required approval or is subject to the range of application of the ATEX directive.

## 9.1 Marking Configuration Examples

### 9.1.1 Marking for Europe According to ATEX and IECEx

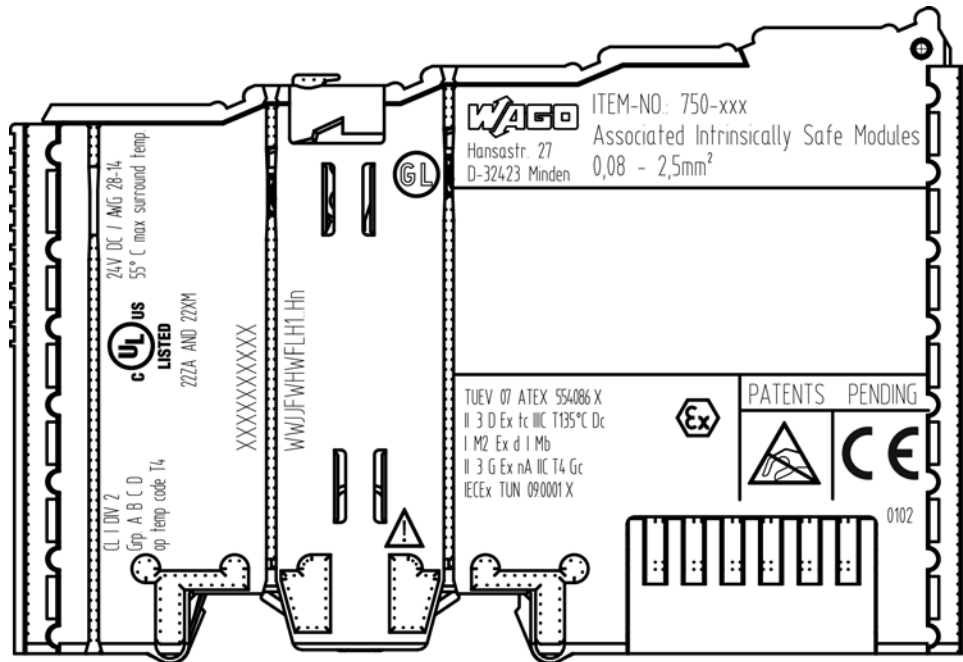


Figure 26: Marking Example According to ATEX and IECEx

TUEV 07 ATEX 554086 X  
 II 3 D Ex tc IIC T135°C Dc  
 I M2 Ex d I Mb  
 II 3 G Ex nA IIC T4 Gc  
 IECEx TUN 090001 X



Figure 27: Text Detail – Marking Example According to ATEX and IECEx

Table 34: Description of Marking Example According to ATEX and IECEx

Marking	Description
TUEV 07 ATEX 554086 X IECEX TUN 09.0001 X	Approving authority resp. certificate numbers
<b>Dust</b>	
II	Equipment group: All except mining
3 D	Category 3 (Zone 22)
Ex	Explosion protection mark
tc	Type of protection: Protection by enclosure
IIIC	Explosion group of dust
T135°C	Max. surface temperature of the enclosure (without a dust layer)
Dc	Equipment protection level (EPL)
<b>Mining</b>	
I	Equipment group: Mining
M2	Category: High level of protection
Ex	Explosion protection mark
d	Type of protection: Flameproof enclosure
I	Explosion group for electrical equipment for mines susceptible to firedamp
Mb	Equipment protection level (EPL)
<b>Gases</b>	
II	Equipment group: All except mining
3 G	Category 3 (Zone 2)
Ex	Explosion protection mark
nA	Type of protection: Non-sparking equipment
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135 °C
Gc	Equipment protection level (EPL)

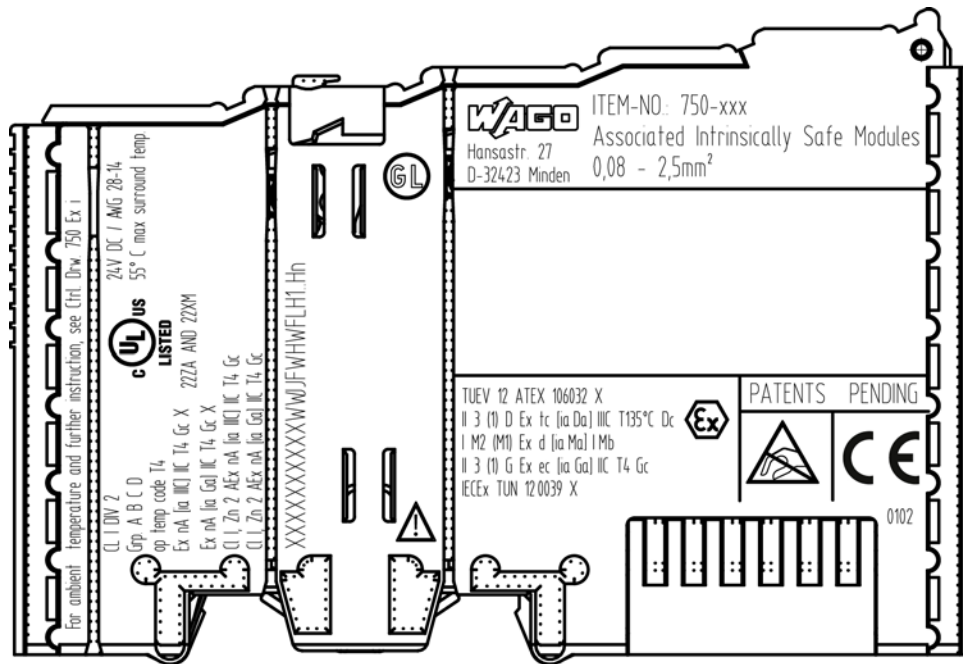


Figure 28: Marking Example for Approved Ex i I/O Module According to ATEX and IECEx

TUEV 12 ATEX 106032 X  
 II 3 (1) D Ex tc [ia Da] IIC T135°C Dc  
 I M2 (M1) Ex d [ia Ma] I Mb  
 II 3 (1) G Ex ec [ia Ga] IIC T4 Gc  
 IECEx TUN 120039 X



Figure 29: Text Detail – Marking Example for Approved Ex i I/O Module According to ATEX and IECEx



Table 35: Description of Marking Example for Approved Ex i I/O Module According to ATEX and IECEx

Marking	Description
TUEV 12 ATEX 106032 X IECEX TUN 12 0039 X	Approving authority resp. certificate numbers
<b>Dust</b>	
II	Equipment group: All except mining
3 (1) D	Category 3 (Zone 22) equipment containing a safety device for a category 1 (Zone 20) equipment
Ex	Explosion protection mark
tc	Type of protection: Protection by enclosure
[ia Da]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIIC	Explosion group of dust
T135°C	Max. surface temperature of the enclosure (without a dust layer)
Dc	Equipment protection level (EPL)
<b>Mining</b>	
I	Equipment Group: Mining
M2 (M1)	Category: High level of protection with electrical circuits which present a very high level of protection
Ex	Explosion protection mark
d	Type of protection: Flameproof enclosure
[ia Ma]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety electrical circuits
I	Explosion group for electrical equipment for mines susceptible to firedamp
Mb	Equipment protection level (EPL)
<b>Gases</b>	
II	Equipment group: All except mining
3 (1) G	Category 3 (Zone 2) equipment containing a safety device for a category 1 (Zone 0) equipment
Ex	Explosion protection mark
ec	Equipment protection by increased safety "e"
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 0
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135 °C
Gc	Equipment protection level (EPL)

### 9.1.2 Marking for America (NEC) and Canada (CEC)

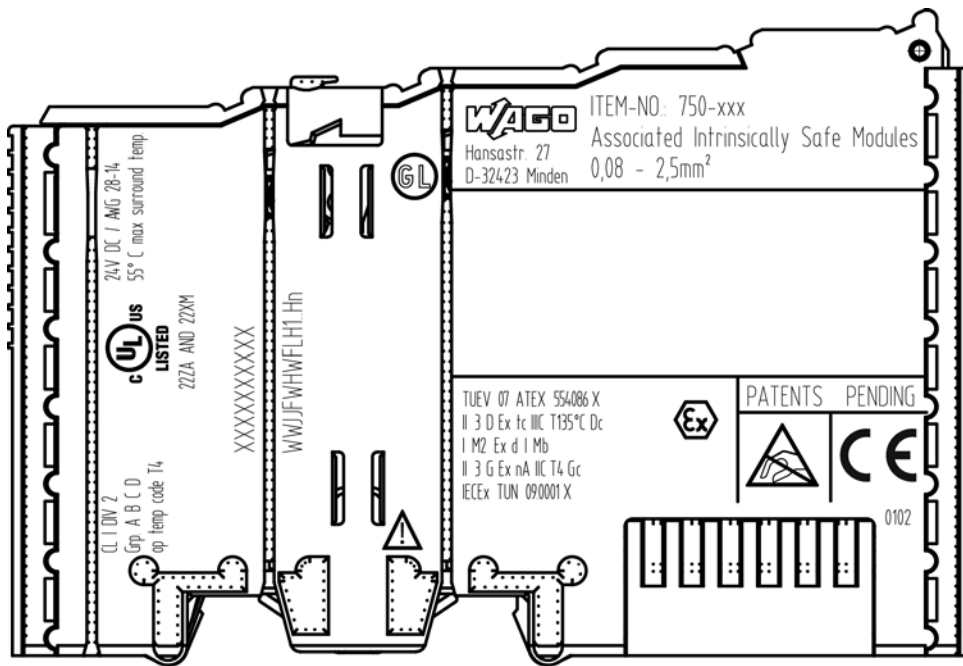


Figure 30: Marking Example According to NEC

CL I DIV 2  
Grp. A B C D  
op temp code T4

Figure 31: Text Detail – Marking Example According to NEC 500

Table 36: Description of Marking Example According to NEC 500

Marking	Description
CL I	Explosion protection (gas group)
DIV 2	Area of application
Grp. A B C D	Explosion group (gas group)
op temp code T4	Temperature class

CI I, Zn 2 AEx nA [ia Ga] IIC T4 Gc

Figure 32: Text Detail – Marking Example for Approved Ex i I/O Module According to NEC 505

Table 37: Description of Marking Example for Approved Ex i I/O Module According to NEC 505

Marking	Description
CI I,	Explosion protection group
Zn 2	Area of application
AEx	Explosion protection mark
nA	Type of protection
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)

CI I, Zn 2 AEx nA [ia IIIC] IIC T4 Gc

Figure 33: Text Detail – Marking Example for Approved Ex i I/O Module According to NEC 506

Table 38: Description of Marking Example for Approved Ex i I/O Modules According to NEC 506

Marking	Description
CI I,	Explosion protection group
Zn 2	Area of application
AEx	Explosion protection mark
nA	Type of protection
[ia IIIC]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)

Ex nA [ia IIIC] IIC T4 Gc X  
Ex nA [ia Ga] IIC T4 Gc X

Figure 34: Text Detail – Marking Example for Approved Ex i I/O Modules According to CEC 18 attachment J

Table 39: Description of Marking Example for Approved Ex i I/O Modules According to CEC 18 attachment J

Marking	Description
<b>Dust</b>	
Ex	Explosion protection mark
nA	Type of protection
[ia IIIC]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 20
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)
X	Symbol used to denote specific conditions of use
<b>Gases</b>	
Ex	Explosion protection mark
nA	Type of protection
[ia Ga]	Type of protection and equipment protection level (EPL): Associated apparatus with intrinsic safety circuits for use in Zone 0
IIC	Group
T4	Temperature class
Gc	Equipment protection level (EPL)
X	Symbol used to denote specific conditions of use

## 9.2 Installation Regulations

For the installation and operation of electrical equipment in hazardous areas, the valid national and international rules and regulations which are applicable at the installation location must be carefully followed.

### 9.2.1 Special Notes Regarding Explosion Protection

The following warning notices are to be posted in the immediately proximity of the WAGO-I/O-SYSTEM 750 (hereinafter “product”):

**WARNING – DO NOT REMOVE OR REPLACE FUSED WHILE ENERGIZED!**

**WARNING – DO NOT DISCONNECT WHILE ENERGIZED!**

**WARNING – ONLY DISCONNECT IN A NON-HAZARDOUS AREA!**

Before using the components, check whether the intended application is permitted in accordance with the respective printing. Pay attention to any changes to the printing when replacing components.

The product is an open system. As such, the product must only be installed in appropriate enclosures or electrical operation rooms to which the following applies:

- Can only be opened using a tool or key
- Inside pollution degree 1 or 2
- In operation, internal air temperature within the range of  $0\text{ °C} \leq T_a \leq +55\text{ °C}$  or  $-20\text{ °C} \leq T_a \leq +60\text{ °C}$  for components with extension number .../025-xxx or  $-40\text{ °C} \leq T_a \leq +70\text{ °C}$  for components with extension number .../040-xxx
- Minimum degree of protection: min. IP54 (acc. to EN/IEC 60529)
- For use in Zone 2 (Gc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -7, -11, -15
- For use in Zone 22 (Dc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -7, -11, -15 and -31
- For use in mining (Mb), minimum degree of protection IP64 (acc. EN/IEC 60529) and adequate protection acc. EN/IEC/ABNT NBR IEC 60079-0 and -1
- Depending on zoning and device category, correct installation and compliance with requirements must be assessed and certified by a “Notified Body” (ExNB) if necessary!

---

Explosive atmosphere occurring simultaneously with assembly, installation or repair work must be ruled out. Among other things, these include the following activities

- Insertion and removal of components
- Connecting or disconnecting from fieldbus, antenna, D-Sub, ETHERNET or USB connections, DVI ports, memory cards, configuration and programming interfaces in general and service interface in particular:
  - Operating DIP switches, coding switches or potentiometers
  - Replacing fuses

Wiring (connecting or disconnecting) of non-intrinsically safe circuits is only permitted in the following cases

- The circuit is disconnected from the power supply.
- The area is known to be non-hazardous.

Outside the device, suitable measures must be taken so that the rated voltage is not exceeded by more than 40 % due to transient faults (e.g., when powering the field supply).

Product components intended for intrinsically safe applications may only be powered by 750-606 or 750-625/000-001 bus supply modules.

Only field devices whose power supply corresponds to overvoltage category I or II may be connected to these components.

## 9.2.2 Special Notes Regarding ANSI/ISA Ex

For ANSI/ISA Ex acc. to UL File E198726, the following additional requirements apply:

- Use in Class I, Division 2, Group A, B, C, D or non-hazardous areas only
- ETHERNET connections are used exclusively for connecting to computer networks (LANs) and may not be connected to telephone networks or telecommunication cables
- **WARNING** – The radio receiver module 750-642 may only be used to connect to external antenna 758-910!
- **WARNING** – Product components with fuses must not be fitted into circuits subject to overloads!  
These include, e.g., motor circuits.
- **WARNING** – When installing I/O module 750-538, “Control Drawing No. 750538” in the manual must be strictly observed!



### *Information*

#### **Additional Information**

Proof of certification is available on request.

Also take note of the information given on the operating and assembly instructions.












The manual, containing these special conditions for safe use, must be readily available to the user.

## 10 Appendix

### 10.1 Device Types

The following Device Types are supported by the DALI Multi-Master Module:

Table 40: DALI Device Types

Icon	Function	Icon/type	Label
	Control Gear (ECG)	 0	Standard ECG
		 1	Separate emergency lighting
		 2	Discharge lamp
		 3	Low voltage halogen lamp
		 4	Filament lamp
		 5	Converting the digital signal into a DC voltage
		 6	LED lamp
		 7	Switching function
		 8	Color control device
		 9	Sequencer



## Glossary

### A

#### Auto-Replace Function

In the event that exactly one control gear item (ECG) is defective and is replaced by a non-addressed ECG, the “Replace” function can be used to automatically assign the old short address of the previous control gear to the new control gear and subsequently restore the settings for that control gear using the data stored in the module database.

### C

#### Control Gear (electronic ballast, ECG)

“Control Gear” is the short designation for “electronic control gear” (ECG). In DALI networks, control gear is implemented as one or more components between the network power supply and one or more lamps. The control gear is used for power supply for the lighting and for communication with DALI. The control gears provide the switch-on voltage and warm-up current for the lamps to prevent a cold start, thus enhancing the power factor and reducing electromagnetic interference.

#### Control Device

“Control Device” is the IEC designation for the DALI-(Multi)-Master. This term also denotes the active sensors.

### D

#### DALI

“DALI” is the acronym for “Digital Addressable Lighting Interface”, a protocol for control of lighting devices and equipment in building automation, such as switched-mode power supply units (“electronic transformers”), electronic control gear (ECG) or electronic dimmers. Specific definitions are elucidated in the IEC 62386 series of standards.

→ Refer also to “IEC 62386”.

#### DALI Short Address

Each device with a DALI interface is addressed in the network using a DALI short address. For some multifunction devices, such as the multisensors, each individual function (brightness, presence, remote control) can be assigned a dedicated DALI short address, enabling the function to be specifically addressed.

## E

### Easy mode

In the “Easy” mode, attached DALI devices are represented in binary form with two bits each on the process image. These two bits correspond to the button functions (ON/OFF, DIMMING) and are implemented in the DALI Multi-Master Module (753-647). The status is queried in cycles.

The “Easy mode” is implemented by modules in the firmware.

→ See also “Full mode.”

## F

### Full mode

In the “Full” mode, switching commands are specified by a higher-order control system via a PLC application.

The transmission within the I/O module occurs via the I/O module internal mailbox. Querying of process data is acyclic.

The “Full mode” is implemented by modules in WAGO-I/O-PRO.

→ See also “Easy mode.”

## I

### IEC 62386

The “IEC 62386” “Digitally addressable interface for lighting” is a series of standards which defines details specific to DALI. This series of standards is reviewed by the IEC subcommittee SC 34C and consists of different sections (date, Sept. 2010):

- 101: System,
- 102: Operating Devices,
- 201 to -210: Device Types 0-9:
  - 201: Device Type 0: Fluorescent Lamps
  - 202: Device Type 1: Independent Emergency Lighting
  - 203: Device Type 2: Discharge Lamps
  - 204: Device Type 3: Low-Voltage Halogen Lamps,
  - 205: Device Type 4: Incandescent Lamps
  - 206: Device Type 5: Conversion of Digital Signals to DC Voltage
  - 207: Device Type 6: LED Modules
  - 208: Device Type 7: Switching Function
  - 209: Device Type 8: Color/Color Temperature Control
  - 210: Device Type 9: Sequencers

## M

### Multi-Master

In a “Multi-Master”, control of the intelligent measuring and automation devices on the fieldbus is performed locally, in contrast to a Master-Slave system.

The WAGO DALI Multi-Master Module (753-647) is a Multi-Master, which supports the DALI interface and can utilize this interface together with other master devices.

## R

### Random Address

The “Random address” (or “Search Address”) is a 24-bit address generated by an ECG during initialization.

## S

### Single Master

In contrast to a Multi-Master, a “Single Master” does not support collision detection and is not suitable for connection at the same interface with other masters.

### Settling Time

The “Settling Time” is the minimum time period between 2 frames.

## V

### Virtual Group

A DALI group is a logical combination of devices to which a common group address is assigned so that these devices execute a common function synchronously. These devices do not necessarily have to be physically linked (e.g., the group for all emergency lighting systems, all hallway lights, etc.).

In the event that the 16 group addresses available for this (0 ... 15) are not sufficient, as further groups are required, an additional 16 virtual groups (with group addresses 17 ... 31) can also be created. These groups cannot, however, be addressed via a DALI group command, but only one after the other by individual commands from the DALI Multi-Master Module. A maximum of 8 devices may be assigned to each virtual group in order not to slow down or impede DALI data exchange on the bus.

## List of Figures

Figure 1: Overview of DALI Network with a WAGO I/O SYSTEM 750 .....	18
Figure 2: View .....	21
Figure 3: Data Contacts .....	22
Figure 4: CAGE CLAMP® Connectors .....	23
Figure 5: Display Elements.....	25
Figure 6: Schematic Diagram .....	26
Figure 7: Insert I/O Module (Example).....	39
Figure 8: Snap the I/O Module into Place (Example).....	39
Figure 9: Removing the I/O Module (Example).....	40
Figure 10: Plug and I/O Module.....	41
Figure 11: Assignment of I/O Module to Plug Using Mini-WSB Tags.....	41
Figure 12: Attachment of Cable Binders.....	42
Figure 13: Assembling the Coding Fingers.....	42
Figure 14: Inserting the Coding Fingers .....	42
Figure 15: Plugging the Plug into Place.....	43
Figure 16: “Sure Match” Coding Fingers .....	43
Figure 17: Pulling the Pull Tab .....	44
Figure 18: Removing the Plug Without Tools .....	44
Figure 19: Removing the Plug Using a Screwdriver .....	44
Figure 20: Connecting a Conductor to a CAGE CLAMP® .....	45
Figure 21: Power Supply Concept, Category EMC1 and EMC2 (Marine Applications) .....	46
Figure 22: Configuration Diagram for the DALI Multi-Master DC/DC Converter (753-620) with 1 DALI Multi-Master Module .....	49
Figure 23: Configuration Diagram for 3 DALI Multi-Master DC/DC Converters (753-620) with 3 DALI Multi-Master Modules.....	50
Figure 24: Configuration Diagram for a 787-1007 Power Supply with 5 DALI Multi-Master Modules.....	50
Figure 25: Example of DALI Topology.....	52
Figure 26: Marking Example According to ATEX and IECEx.....	62
Figure 27: Text Detail – Marking Example According to ATEX and IECEx.....	62
Figure 28: Marking Example for Approved Ex i I/O Module According to ATEX and IECEx.....	64
Figure 29: Text Detail – Marking Example for Approved Ex i I/O Module According to ATEX and IECEx.....	64
Figure 30: Marking Example According to NEC.....	66
Figure 31: Text Detail – Marking Example According to NEC 500.....	66
Figure 32: Text Detail – Marking Example for Approved Ex i I/O Module According to NEC 505.....	67
Figure 33: Text Detail – Marking Example for Approved Ex i I/O Module According to NEC 506.....	67
Figure 34: Text Detail – Marking Example for Approved Ex i I/O Modules According to CEC 18 attachment J .....	68

## List of Tables

Table 1: Number Notation .....	9
Table 2: Font Conventions .....	9
Table 3: Required Hardware of the WAGO-I/O-SYSTEM.....	14
Table 4: Controller Compatibility List.....	15
Table 5: Abbreviations and Terms Used in this Manual.....	17
Table 6: Legend for Figure “View” .....	21
Table 7: Legend for Figure “CAGE CLAMP® Connectors” .....	23
Table 8: Legend for Figure “Display Elements”.....	25
Table 9: Technical Data – Device.....	27
Table 10: Technical Data – Supply.....	27
Table 11: Technical Data – Communication .....	27
Table 12: Technical Data – Field Wiring.....	27
Table 13: Technical Data – Data Contacts .....	28
Table 14: Technical Data – Climatic Environmental Conditions.....	28
Table 15: Lighting Control via Buttons.....	34
Table 16: Overview of the Output Process Image in the “Easy Mode” .....	34
Table 17: Overview of Input Process Image in the “Easy Mode” .....	34
Table 18: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 0 und 1 .....	35
Table 19: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 18 ... 21 .....	35
Table 20: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 18 ... 21 .....	36
Table 21: Output and Input PI for the DALI Multi-Master Module in the “Easy Mode” – Byte 22 and 23.....	37
Table 22: Legend for the Figure “Power Supply Concept, Category EMC1 and EMC2 (Marine Applications)” .....	46
Table 23: Combination Filter Module and DC/DC Converter .....	47
Table 24: Conductor Cross Section Depending on the Cable Length.....	51
Table 25: Example of a Fieldbus Node Setup .....	53
Table 26: LED “A” Status Diagnosis .....	56
Table 27: LED “B” Status Diagnosis .....	56
Table 28: LED “C” Status Diagnosis .....	57
Table 29: LED “D” Status Diagnosis.....	57
Table 30: LED “E” Status Diagnosis .....	58
Table 31: LED “F” Status Diagnosis .....	58
Table 32: LED “G” Status Diagnosis.....	59
Table 33: LED “H” Status Diagnosis.....	60
Table 34: Description of Marking Example According to ATEX and IECEx.....	63
Table 35: Description of Marking Example for Approved Ex i I/O Module According to ATEX and IECEx.....	65
Table 36: Description of Marking Example According to NEC 500 .....	66
Table 37: Description of Marking Example for Approved Ex i I/O Module According to NEC 505.....	67
Table 38: Description of Marking Example for Approved Ex i I/O Modules According to NEC 506.....	67

Table 39: Description of Marking Example for Approved Ex i I/O Modules  
According to CEC 18 attachment J .....68  
Table 40: DALI Device Types.....72





WAGO Kontakttechnik GmbH & Co. KG  
Postfach 2880 • 32385 Minden  
Hansastraße 27 • 32423 Minden  
Phone: 0571/887 – 0  
Fax: 0571/887 – 169  
E-Mail: [info@wago.com](mailto:info@wago.com)  
Internet: <http://www.wago.com>